

# INSTALLATION MANUAL

## Level of Difficulty

Easy

Installation difficulty levels are based on time and effort involved and may vary depending on the installer level of expertise, condition of the vehicle and proper tools and equipment.

## Wiring Location(s)

Under dash

## Tools Required

Cutting tool	--
--------------	----

## ⚠ WARNING

Do not exceed product rating or tow vehicle lamp load rating, whichever is lower.

## Product Photo



## Hardware Photo



## NOTICE

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

All steps must be followed to ensure the product will function properly. Once installed, test for proper function by using a test light or connecting a properly wired trailer.

## Maintenance

Periodic inspection of all wires and connections should be performed to ensure there is no visible damage or loose connections.

### Step 1

Move the driver seat back to the rear-most position. Locate the white housing under the dash behind the vehicle accelerator pedal.



### Step 2

Using a cutting tool, remove the tape that is securing the housing in place. Be sure not to cut the wires attached to the housing or the wires the housing is taped to.



### Step 3

Insert the custom wiring harness into the vehicle housing and brake controller.

Follow the brake controller instructions for use and set up.