

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY

fia

FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM



INSTALLATION INSTRUCTIONS
FOR

NP92-60/ OE32-60/ SL62-60/ SP82-60/ TR42-60/ TRS42-60

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVER:

- 1) Remove head rest (see note)
- 2) Slip cover over backrest under center seat belt.. Holding cushion up in ¾ position allows for better access. **REMOVE JACK (IF EQUIPPED WITH ONE) AND REPLACE AFTER INSTALLATION IS COMPLETE**
- 3) With seat cushion in down position, smooth cover from top to bottom
- 4) Feed the back straps behind the seat so they go all the way down. Due to restricted space, some assistance may be required. A 4" x 30" piece of cardboard with 2 slits at one end will simplify the placing of the straps. The cardboard strip can be cut from the seat cover box. (see note)

- 5) With seat cushion in down position, reach through crevice where backrest and cushion meet. Bring straps forward and buckle at the front of the cover
- 6). Tuck bottom of cover through crevice under backrest and tighten all straps
- 7) Locate bottom right flap through crevice and hold at back of seat With other hand bring the side flap around and attach (see note)
- 8) Repeat on left side
- 9) Adjust all straps, buckles and velcro


B) CUSHION COVER:

- 1) Center cover on the seat
- 2) Pull seat cover tightly side to side so that the front and back flaps tuck under seat
- 3) Pass the front straps under the seat and buckle to back flap

- 4) Pass side straps around the back of seat and buckle
- 5) adjust all straps/buckles and velcro to equalize tension for a uniform fit

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

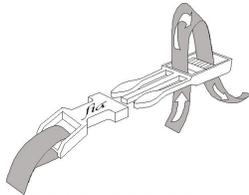


2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

(If unable to remove consult dealership)

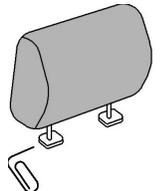

3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
B) Replace headrests

4) FEEDING BACK STRAPS ON BACKREST



5) BOTTOM FLAP INSTALLATION



WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

fia

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

06-18-13