

SEAT COVERS  
BY



**FEATURING  
SUPER-GRIP® THE SLIP RESISTANT FASTENING SYSTEM**

**INSTALLATION INSTRUCTIONS  
FOR  
NP92-67/ Oe32-67/ SL62-67/ SP82-67/ TR42-67/ TRS42-67**

**CUSHION COVERS**


1. Center cover on seat
2. Lift cushion to halfway up position and pass back flap through crevice
3. With cushion in up position locate straps and buckle to back flap
4. smooth out cover and adjust straps to equalize tension for a better fit

**BACKREST COVERS**

1. Remove headrests, (see note below)
2. Place cover over backrest. Ensure cover is installed under seat belt strap
3. Ensure openings for headrest posts are tucked under headrest base to reduce cover movement during installation.
4. Pass strap with velcro behind the seat and attach velcro to the bottom of cover
5. Pass center strap (60 cushion side) through opening on metal seat belt base on floor and buckle
6. Anchor each center strap on metal seat belt base on the floor and buckle
7. Secure top portion of backrest by placing adhesive velcro supplied on flat surface behind the seat. **NOTE: BEFORE POSITIONING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED**
8. Smooth out cover and adjust straps/velcro to equalize tension for a better fit.

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

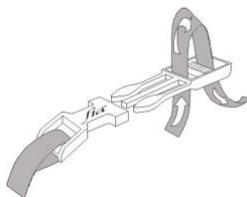

**3) RE-INSTALLATION OF HEADRESTS**


- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests

**2) HEAD REST REMOVAL:**

Push in side release buttons

- Lift off

(If unable to remove consult dealership)

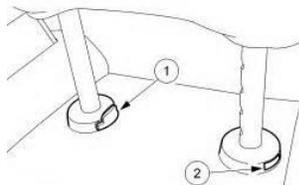

**WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.**



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438  
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com