

# BACKRACK™

FUNCTION AND STYLE FOR TODAY'S TRUCKS

## INSTALLATION INSTRUCTIONS #INST226:

SIDE RAIL KIT #55519, 55519TB, 65519, 65519TB, 80519, 80519TB

2007-2016 Chev/GMC Silverado, Sierra

### READ THIS NOW!

Your truck should look like the one shown. If you think you are missing any parts, think that this part number is not for your truck or have any installation questions, call our customer service department at toll free:

**800-265-8137** or locally **905 849-3633**.


Other ways to reach BACKRACK:

Fax **905-849-4116**


email: [techsupport@backrack.ca](mailto:techsupport@backrack.ca)




The SIDE RAILS are secured to your truck with a set of "Stake Pocket Bolts" specifically designed for your make and model of truck. These bolts mount into each of the two front and rear stake pockets. The SIDE RAIL assembly sits on the bed rails of your truck and is secured to these Stake Pocket Bolts. If your truck has a BEDLINER we suggest you remove it to install the Stake Pocket Bolts

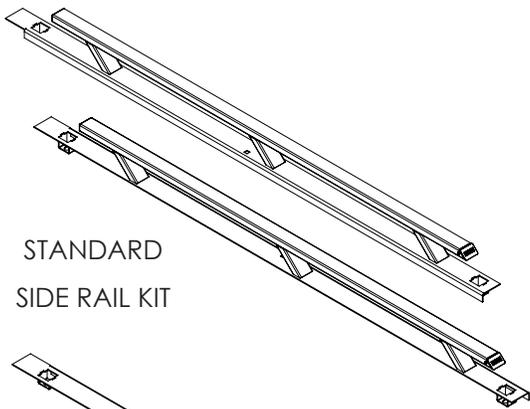

STANDARD  
SIDE RAIL KIT

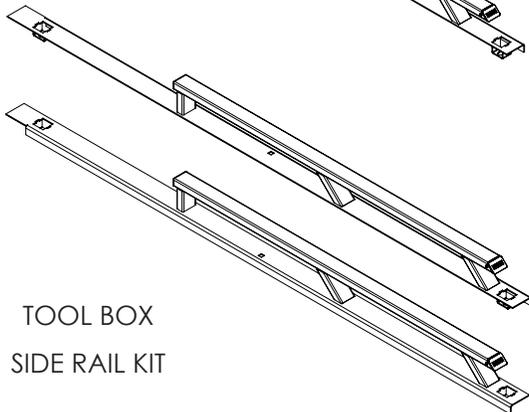

TOOL BOX  
SIDE RAIL KIT

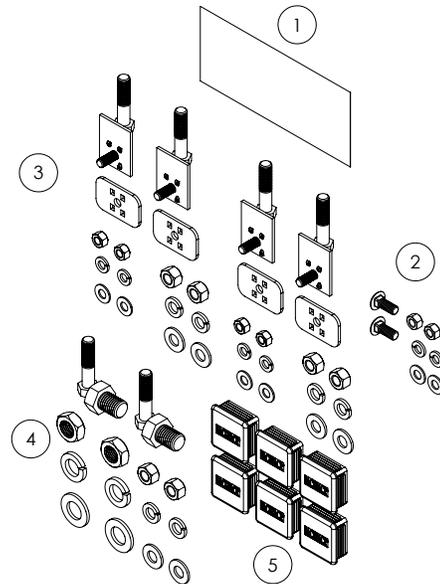

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	INST226	Installation Instruction	1
2	BAG043*	Side Rail Centre Fasteners	1
3	BAG053**	Side Rail Rear Fasteners	2
4	BAG050	Side Rail Rear Fasteners	1
5	SF013***	Stake Pocket Trim Cap	6

\* Included with kits for 6.5 ft box.

\*\* 2 Included with kits for 8ft, 1 for 6.5 ft box.

\*\*\* 4 trim caps included in 6.5 ft kits, qty six in the 8ft kits.

**FOR MORE INFORMATION SCAN HERE!**



# BACKRACK™

FUNCTION AND STYLE FOR TODAY'S TRUCKS


1

Insert stake pocket bolt, fasten as shown with supplied bolt plate, washers and nuts. Make sure the stake pocket bolt tabs are correctly seated in slot on truck bed. Hand tighten until final step.

STAKE POCKET BOLT


3/8" WASHER  
BOLT PLATE  
3/8" LOCK WASHER  
3/8" NUT

2

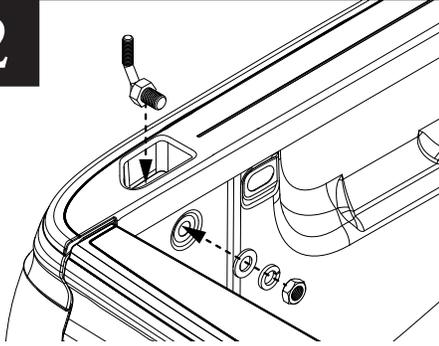

Install rear stake pocket bolt inside pocket. Hand tighten the bolt with lock washer and washer as shown.


3a

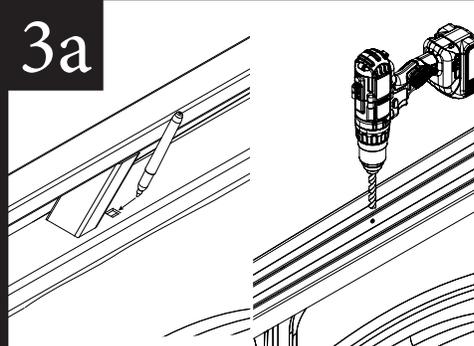

**\*\*FOR 5.5' & 6.5' Beds Only\***

Place the rails onto the truck locating over the stake pocket bolts, the rail can be temporarily hand tightened in place, or held firmly in place while marking. Mark the location of the square hole. Using a hand drill, carefully drill the center of the marked position with a 1/8" drill (pilot hole). Finish drilling rail with a 1/2" drill and de-bur the hole


3b

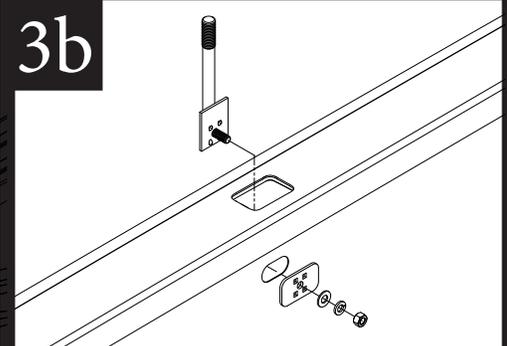

**\*\*FOR 8' beds only\*\***

Insert center stake pocket bolt, fasten as shown with supplied bolt plate, washers and nuts. Make sure the stake pocket bolt tabs are correctly seated in slot on truck bed. Hand tighten until final step.

4

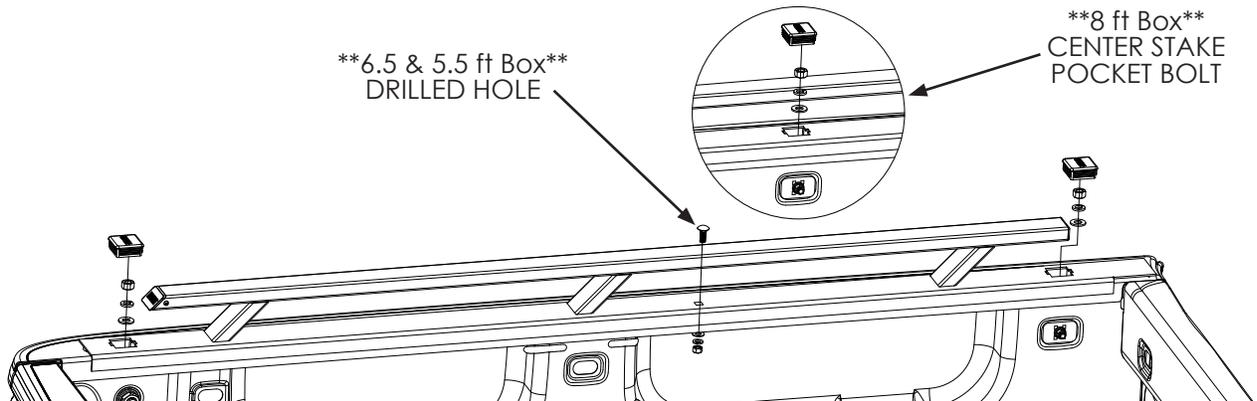

**\*\*6.5 & 5.5 ft Box\*\***  
DRILLED HOLE

**\*\*8 ft Box\*\***  
CENTER STAKE POCKET BOLT

Place side rail over the stake pocket bolts (6.5ft) . Hand tighten all bolts. Align side rail against inside and front of truck bed. Torque all bolts. Snap trim cap into rear square hole.

NOTE:

Illustration shows standard side rail kit, follow same procedure for tool box kit.