

INSTALLATION INSTRUCTIONS #INST008:
REALTRUCK BACKRACK KIT #30108, 30108TB, 30108TB31
 1995-2007 Toyota Tundra

READ THIS NOW!

Your truck should look like the one shown. If you think you are missing any parts, think that this part number is not for your truck or have any installation question, call our customer service department at toll free:

888-588-6101 or locally 800-265-8137.
Other ways to reach RealTruck Backrack:
email: info@backrack.ca
Support@backrack.com



The RealTruck Backrack is secured to your truck with a pair of "Stake Pocket Bolts" specifically designed for your make and model of truck. These bolts mount into each of the two front stake pockets. The RealTruck Backrack assembly sits on the bed rails of your truck and is secured to these Stake Pocket Bolts. If your truck has a BEDLINER we suggest you remove it to install the Stake Pocket Bolts

PARTS LIST FOR KIT #30108

| PART | DESCRIPTION | QTY |
|------------------------|--------------------------------------|-----|
| RMB503P | Rail Mount Bracket Passenger | 1 |
| RMB503D | Rail Mount Bracket Driver | 1 |
| RP503S | Rail Plate Symmetrical | 2 |
| HARDWARE BAG508 | | |
| INST008 | Installation Instruction | 1 |
| FYZ008 | 1/2"-20 Nylon Hex Lock Nut | 2 |
| FYZ009 | 1/2"-13 Hex Nut | 2 |
| FYZ010 | 1/2" Lock Washer | 2 |
| FYZ011 | 1/2" Flat Washer | 2 |
| FYZ012 | 1/2" Flat Washer Large | 2 |
| FYZ014 | 1/2"-20 x 3.25" Carrige Bolt Grade 8 | 2 |
| FYZ016 | 5/8"-11 Hex Nut | 2 |
| FYZ017 | 5/8" Lock Washer | 2 |
| FYZ018 | 5/8" Flat Washer | 2 |
| SBY508S | Stake Pocket Bolt | 2 |
| SF002 | 2" x 6" Foam Pad | 2 |

PARTS LIST FOR KIT #30108TB,
 30108TB31


| PART | DESCRIPTION | QTY |
|------------------------|--------------------------------------|-----|
| TB503D | Toolbox Bracket Driver | 1 |
| TB503P | Toolbox Bracket Passenger | 1 |
| OR | | |
| TB901D | 31" Toolbox Bracket Driver | 1 |
| TB901P | 31" Toolbox Bracket Passenger | 1 |
| HARDWARE BAG508 | | |
| INST008 | Installation Instruction | 1 |
| FYZ008 | 1/2"-20 Nylon Hex Lock Nut | 2 |
| FYZ009 | 1/2"-13 Hex Nut | 2 |
| FYZ010 | 1/2" Lock Washer | 2 |
| FYZ011 | 1/2" Flat Washer | 2 |
| FYZ012 | 1/2" Flat Washer Large | 2 |
| FYZ014 | 1/2"-20 x 3.25" Carrige Bolt Grade 8 | 2 |
| FYZ016 | 5/8"-11 Hex Nut | 2 |
| FYZ017 | 5/8" Lock Washer | 2 |
| FYZ018 | 5/8" Flat Washer | 2 |
| SBY508S | Stake Pocket Bolt | 2 |
| SF002 | 2" x 6" Foam Pad | 2 |

FOR MORE INFORMATION SCAN HERE!



1


For each stake pocket bolt (driver and passenger) install 1/2" bolt end of stake pocket bolt through the slot on the truck bed. Install the 1/2" steel washer, lock washer and nut. Leave assembly finger tight at this stage.

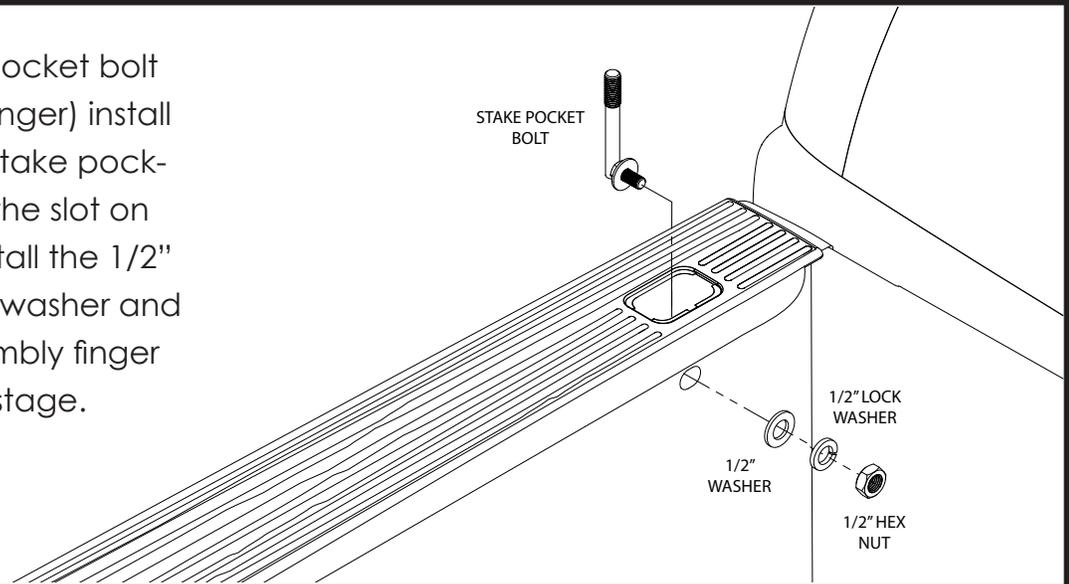


2

Fasten the RealTruck Backrack to the Rail mount bracket, or Toolbox bracket. Finger tighten at this stage.

****IMPORTANT****
Install the carriage bolt as shown in the diagram with the round head closest to the cab. Failure to do so could result in damage to the cab or rear window.

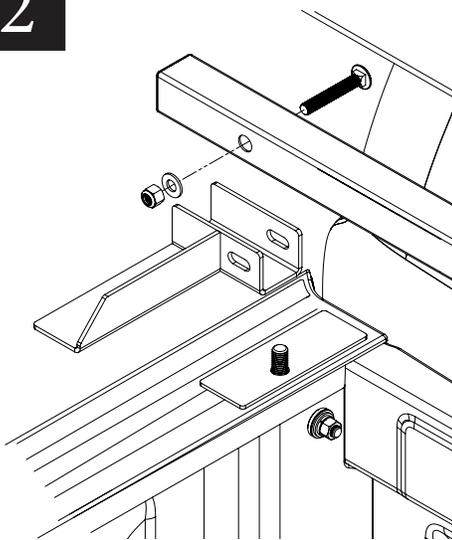

KIT #30108

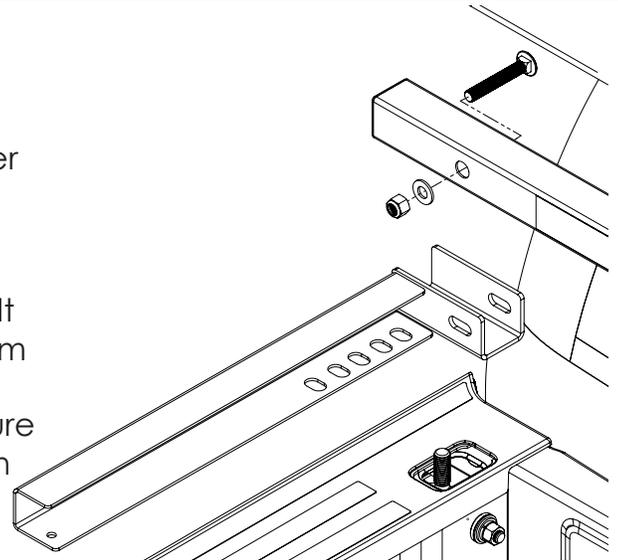


KIT #30108TB,
30108TB31

3


Fasten the RealTruck Backrack Assembly to the Stake pocket bolt as shown.

Center the RealTruck Backrack assembly on the truck and final torque all bolts starting with the nuts on the inside of the truck bed, then the rail mount or toolbox bracket and finally the main RealTruck Backrack carriage bolt

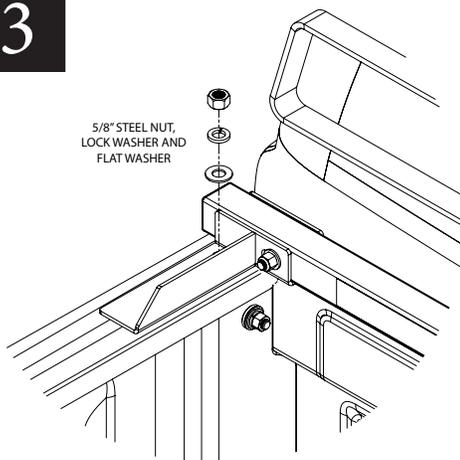

5/8" STEEL NUT,
LOCK WASHER AND
FLAT WASHER

KIT #30108

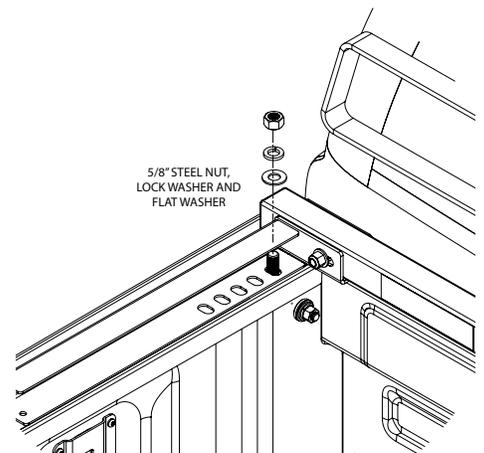

5/8" STEEL NUT,
LOCK WASHER AND
FLAT WASHER

KIT #30108TB,
30108TB31