

# BACKRACK™

FUNCTION AND STYLE FOR TODAY'S TRUCKS

## INSTALLATION INSTRUCTIONS #INST009:

BACKRACK KIT #30109, 30109TB, 30109TB31

1999-2007 Chev/GMC Classic

### READ THIS NOW!

Your truck should look like the one shown. If you think you are missing any parts, think that this part number is not for your truck or have any installation question, call our customer service department at toll free:

**800-265-8137** or locally **905 849-3633**.

Other ways to reach BACKRACK:

Fax **905-849-4116**

email: [techsupport@backrack.ca](mailto:techsupport@backrack.ca)



The BACKRACK is secured to your truck with a pair of "Stake Pocket Bolts" specifically designed for your make and model of truck. These bolts mount into each of the two front stake pockets. The BACKRACK assembly sits on the bed rails of your truck and is secured to these Stake Pocket Bolts. If your truck has a BEDLINER we suggest you remove it to install the Stake Pocket Bolts

#### PARTS LIST FOR KIT #30109

PART	DESCRIPTION	QTY
RMB503D	Rail Mount Bracket Driver	1
RMB503P	Rail Mount Bracket Passenger	1
RP509D	Rail Plate Driver	1
RP509P	Rail Plate Passenger	1
<b>HARDWARE BAG509</b>		
INST009	Installation Instruction	1
FYZ008	1/2"-20 Nylon Hex Lock Nut	2
FYZ011	1/2" Flat Washer	2
FYZ014	1/2"-20 x 3.25" Carriage Bolt Grade 8	2
FYZ016	5/8"-11 Hex Nut	2
FYZ017	5/8" Lock Washer	2
FYZ018	5/8" Flat Washer	2
SF002	2" x 6" Foam Pad	2
DB9X8ET	Poly Bag	1
SBY524S	Stake Pocket Bolt	2
FYZ019	3/4"-10 Jam Nut	2
FYZ020	3/4" Lock Washer	2
FYZ021	3/4" Flat Washer	2
FYZ022	3/4" Large Flat Washer	2

#### PARTS LIST FOR KIT #30109TB, 30109TB31

PART	DESCRIPTION	QTY
TB503D	Toolbox Bracket Driver	1
TB503P	Toolbox Bracket Passenger	1
<b>OR</b>		
TB901D	31" Toolbox Bracket Driver	1
TB901P	31" Toolbox Bracket Passenger	1
<b>HARDWARE BAG509</b>		
INST009	Installation Instruction	1
FYZ008	1/2"-20 Nylon Hex Lock Nut	2
FYZ011	1/2" Flat Washer	2
FYZ014	1/2"-20 x 3.25" Carriage Bolt Grade 8	2
FYZ016	5/8"-11 Hex Nut	2
FYZ017	5/8" Lock Washer	2
FYZ018	5/8" Flat Washer	2
SF002	2" x 6" Foam Pad	2
DB9X8ET	Poly Bag	1
SBY524S	Stake Pocket Bolt	2
FYZ019	3/4"-10 Jam Nut	2
FYZ020	3/4" Lock Washer	2
FYZ021	3/4" Flat Washer	2
FYZ022	3/4" Large Flat Washer	2

**FOR MORE INFORMATION SCAN HERE!**




# BACKRACK™

FUNCTION AND STYLE FOR TODAY'S TRUCKS

1

Install each stake pocket bolt (driver and passenger) through the slot on the truck bed as shown. Cut foam pads into 2 pieces (total of 4) Apply to truck rail in front and behind stake pocket.

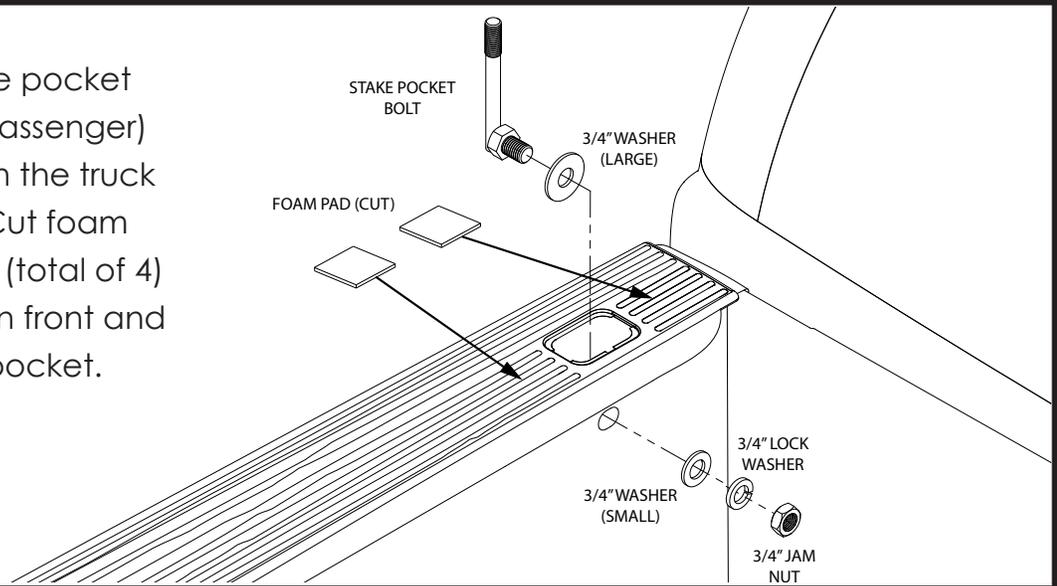


2

Fasten Backrack to the Rail mount bracket, or Toolbox bracket. Finger tighten at this stage.


Install rail plate for standard kit

**\*\*IMPORTANT\*\***

Install the carriage bolt as shown in the diagram with the round head closest to the cab. Failure to do so could result in damage to the cab or rear window.

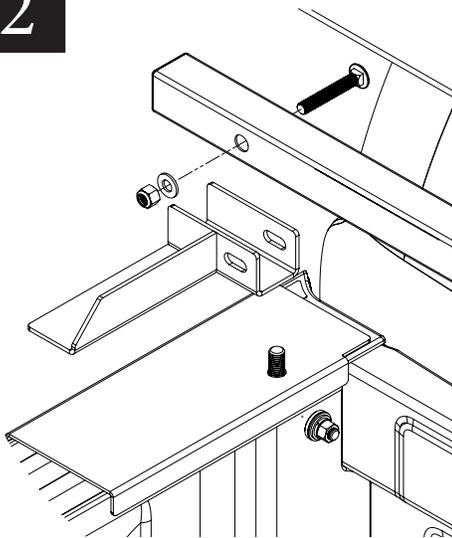

KIT #30109

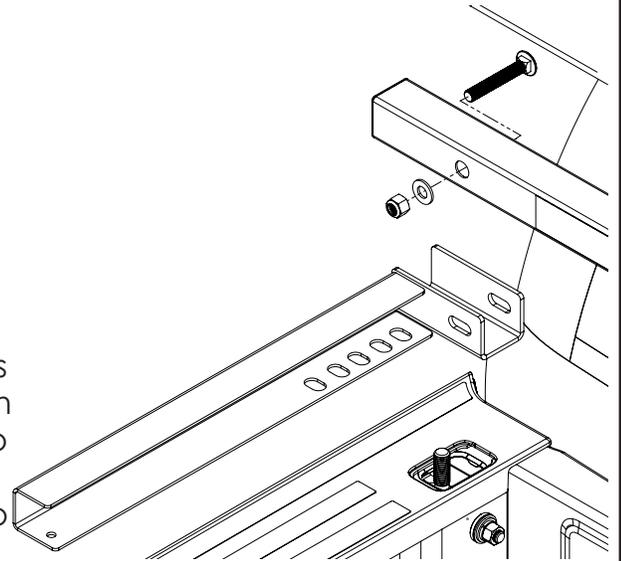


KIT #30109TB,  
30109TB31


3

Fasten Backrack assembly to the stake pocket bolt as shown.

Center the Backrack assembly on the truck and final torque all bolts starting with the nuts on the rail mount or toolbox bracket and finally the main BACKRACK carriage bolt

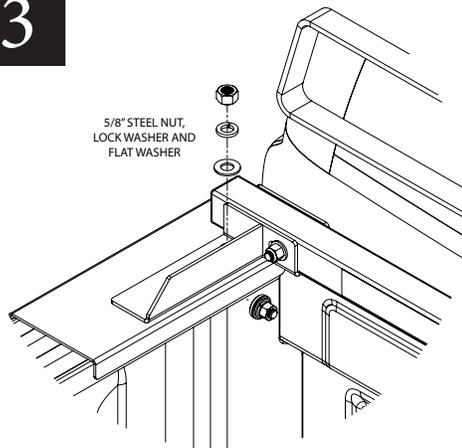

KIT #30109

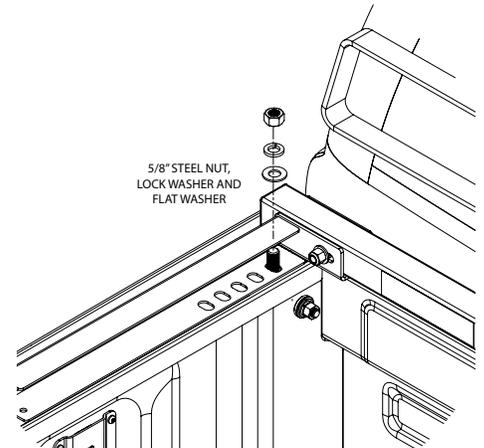

KIT #30109TB,  
30109TB31