

BACKRACK™

FUNCTION AND STYLE FOR TODAY'S TRUCKS

INSTALLATION INSTRUCTIONS : BACKRACK KIT #40122
2019-CURRENT Chevy Silverado, Sierra

READ THIS NOW!

Your truck should look like the one shown. If you think you are missing any parts, think that this part number is not for your truck or have any installation questions, call our customer service department at toll free:

800-265-8137 or locally **905 849-3633**.

Other ways to reach BACKRACK:


Fax **905-849-4116**

email: techsupport@backrack.ca



The BACKRACK is secured to your truck with a pair of "Stake Pocket Bolts" specifically designed for your make and model of truck. These bolts mount into each of the two front stake pockets. The BACKRACK assembly sits on the bed rails of your truck and is secured to these Stake Pocket Bolts. If your truck has a BEDLINER we suggest you remove it to install the Stake Pocket Bolts

#	PART	DESCRIPTION	QTY
1	INST000	Installation Instructions	1
2	FYZ008	1/2"-20 Nylon Hex Lock Nut	2
3	FYZ011	1/2" Flat Washer	2
4	FYZ014	1/2"-20 x 3.25" Carriage Bolt Grade 8	2
5	FYZ016	5/8"-11 Hex Nut	2
6	FYZ017	5/8" Lock Washer	2
7	FYZ018	5/8" Flat Washer	2
8	FYZ020	3/4" Lock Washer	2
9	FYZ021	3/4" Flat Washer	2
10	DB9X8ET	Poly Bag	1
11	SF004	Foam Pad	4
12	SF005	2 Sided Tape SPGPSA1x2x2	4
13	Small BACKRACK Decal	BACKRACK DECAL 5/8" x 9"	2
14	RMB801D	UNIVERSAL Rear Mount Bracket Driver Side	1
15	RMB801P	"UNIVERSAL Rear Mount Bracket Passenger Side"	1
16	RP422D	40122 Rail Plate Driver	1
17	RP422P	40122 Rail Plate Passenger	1
18	TCA012D	Tonneau Cover Adapter Driver	1
19	TCA012P	Tonneau Cover Adapter Passenger	1
20	SBY960S	Stake Bolt - Long Version	2
21	FYZ062	3/4"-10 x 1.25" Full Thd Hex Bolt Grade 5	2

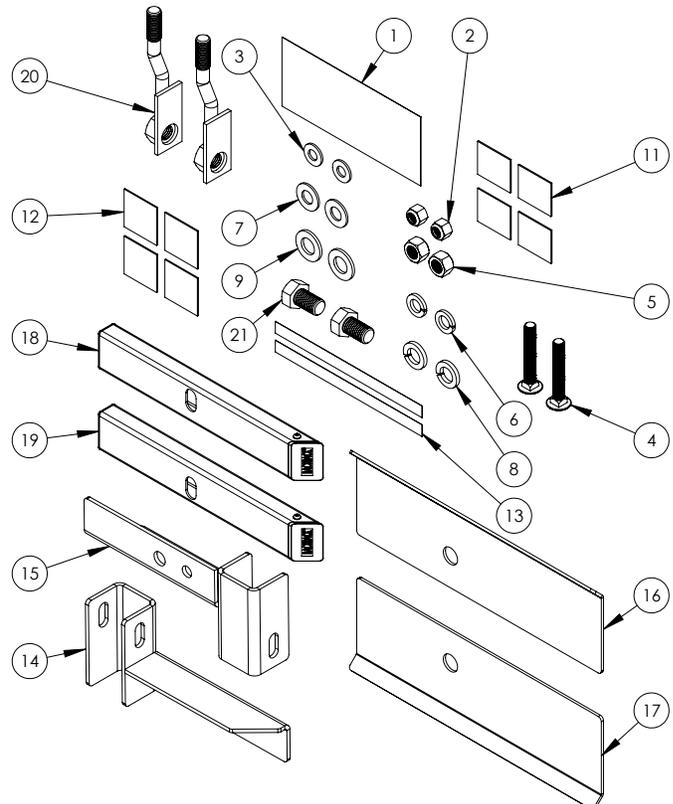


FOR MORE INFORMATION SCAN HERE!



BACKRACK™

FUNCTION AND STYLE FOR TODAY'S TRUCKS


Apply double sided adhesive pads to this side of rail plate (driver and passenger) 1 on each end, approximately center.

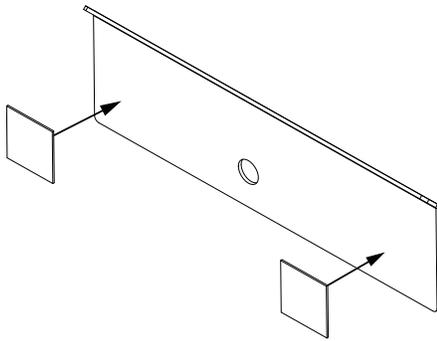

Remove 2nd side in step 4 to adhere to truck rail.

1a


Apply single sided adhesive pads to this side of spacer. Apply BACKRACK decal
 Can also be applied as last step to ensure facing outward

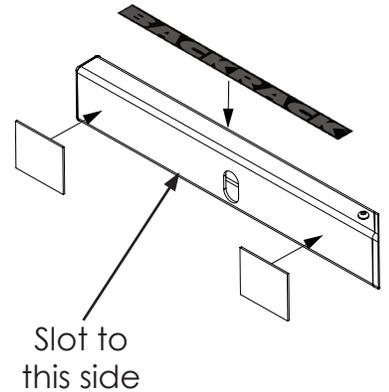

Slot to this side

1b


Insert stake pocket bolt, fasten as shown with supplied washers and bolt. Hand tighten until final step.

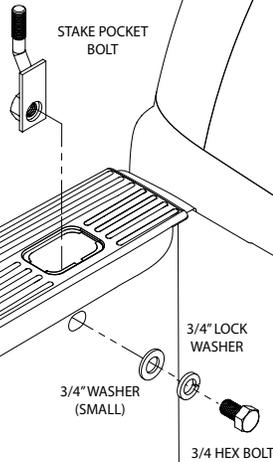

2

Fasten BACKRACK to the Rail mount bracket. Finger tighten at this stage.


****IMPORTANT****
 Install the carriage bolt as shown in the diagram with the round head closest to the cab. Failure to do so could result in damage to the cab or rear window.

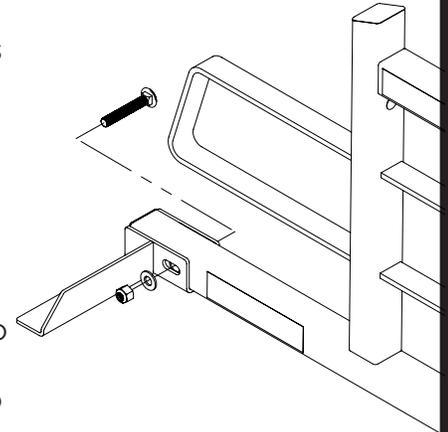

3

Fasten Backrack Assembly to the Stake pocket bolt as shown. Center the Backrack assembly on the truck and final torque all nut and bolts starting with the bolts on the inside of the truck bed, then the rail mount bracket and finally the main BACKRACK carriage bolt.

INSTALL ON 2nd HOLE FROM U CHANNEL

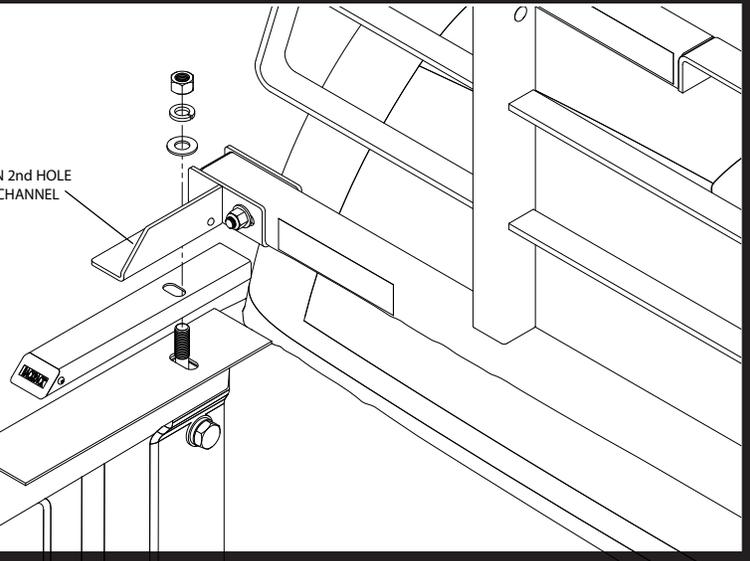

4