

BEDRUG, Inc.

BEDRUG® MAT FOR DROP-IN LINER

INSTALLATION INSTRUCTIONS

WARNING: IMPROPER INSTALLATION WILL RESULT IN LINER FLYING OUT OF THE TRUCK! FOLLOW INSTRUCTIONS EXACTLY!


APPROXIMATE INITIAL INSTALLATION TIME LESS THAN 30 MINUTES
READ COMPLETE INSTRUCTIONS BEFORE PROCEEDING WITH INSTALLATION

1. (15) tree fasteners are included with the Mat. A hammer, awl, punch, drill, drill stop and a 1/4" drill bit are required for installation. Use a sharp utility knife for cutting material if needed.
2. Mats are designed to fit most major brands of drop-in liners. Perforations are provided in strategic areas on some models for assistance in trimming for better fit. See illustration.

NOTE: IF YOU HAVE PURCHASED A UNIVERSAL MAT, THE MAT CAN BE CUT TO FIT ANY DROP-IN LINER APPLICATION.

3. Locate the BedRug bed Mat in the bed of the truck to determine the exact location and fit.
4. a. Locate and punch holes in the Mat with an awl for fasteners. Start at the front center and work outboard and toward the rear. Be sure to locate fastener points on the top of a rib or high spot of the drop in liner to provide clearance for the tree fasteners. See illustration.
b. Center punch the fastener locations in the drop in liner using the Mat as a template.
c. Drill a 1/4" hole in the drop in liner then firmly press tree fastener into position.

NOTE: BE SURE TO USE A DRILL STOP TO PREVENT DAMAGE TO THE TRUCK BED! DO NOT ATTEMPT TO DRILL THROUGH THE MAT MATERIAL!

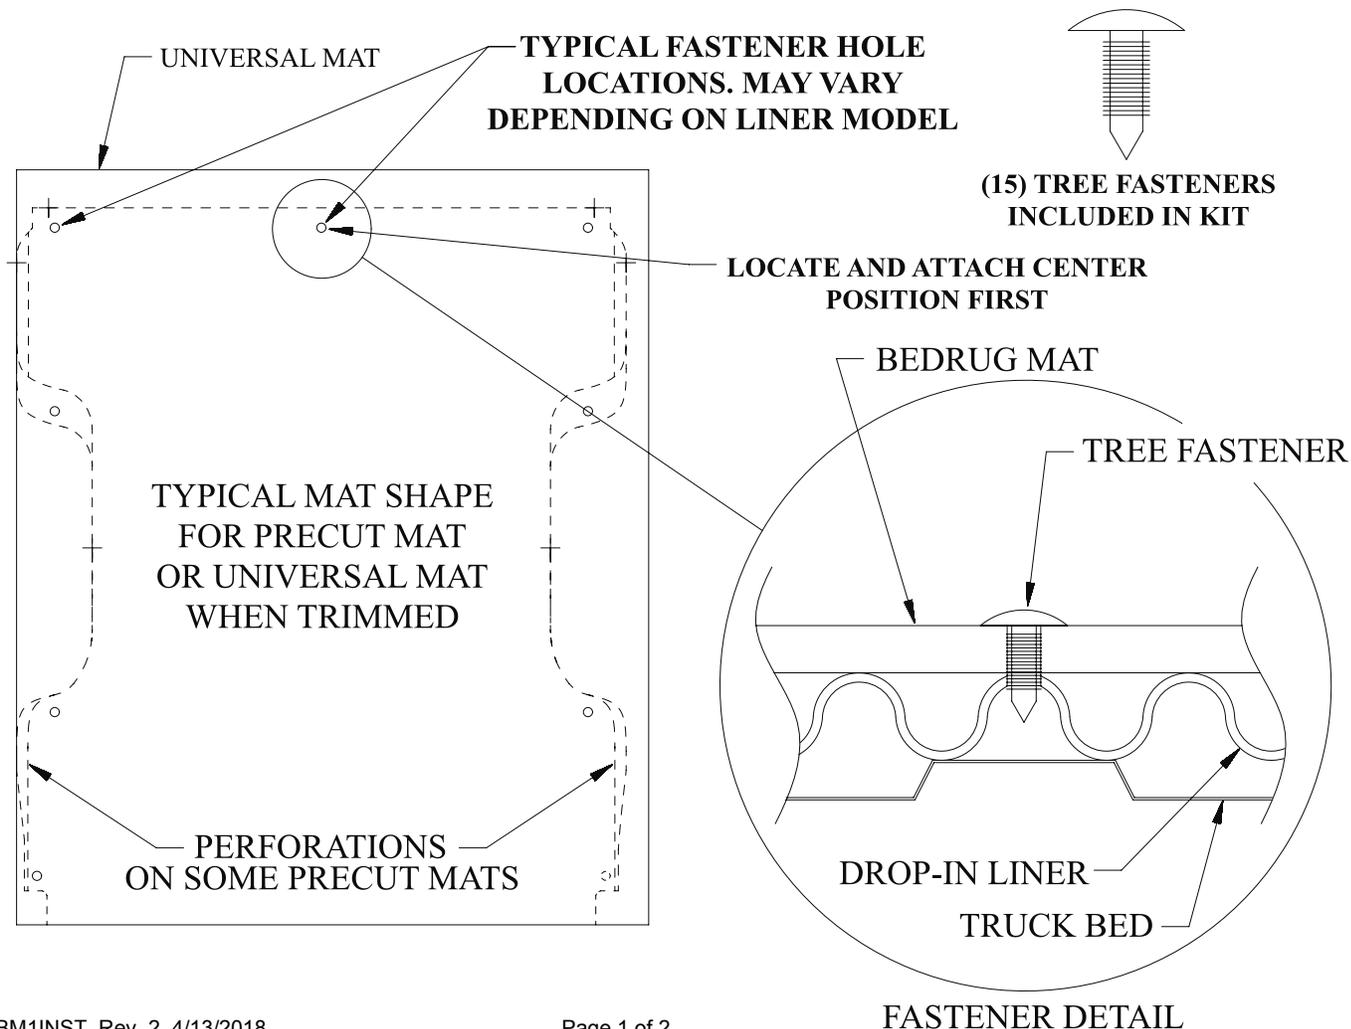

BEDRUG[®] CLEANING INFORMATION

The mildew resistant BedRug foam will not absorb liquids. The engineered polypropylene fiber top surface resists stains and deterioration from most acids, chemicals, gas and oils, etc. Therefore, by following the cleaning instructions below, your BedRug will remain serviceable for as long as you own your truck.

Cleaning your BedRug is easy:

1. A vacuum, broom, brush or compressed air can be used to remove dirt, grime, sand, mulch etc. Due to the fact that water will not harm the BedRug, pressure washing is also an effective way to clean a soiled BedRug.
2. Although most acids will not harm the BedRug, baking soda should be applied immediately to neutralize the acid to ensure the safety of the paint on the truck.
3. To clean tougher jobs such as gasoline, oil, chemicals, acid spills or leaks from your BedRug use detergent soap with degreaser and water, then rinse thoroughly. This detergent soap is used in most car wash locations with pressure washing equipment. The BedRug polypropylene closed-cell foam will not absorb water and the polypropylene fiber dries in minutes.

If you have additional questions, call BedRug Inc. customer service at 800-462-8435.

Retain this cleaning information with your vehicle owner's manual for future reference.

LIMITED WARRANTY

BedRug Inc. warrants BedRug[®], BedTred[™], VanRug[™], and VanTred[™], for pickup trucks and vans to be free from defects in materials and workmanship. BedRug Bedliners will be warranted for the duration of the vehicle ownership by the original BedRug purchaser. The terms of this warranty may vary from state to state. You may have rights under specific state laws that differ from the terms of this warranty. Proof of purchase will be required for warranty service. Customer modifications and/or improper return packaging of the product may void this warranty. Product should be cleaned before return. For warranty instructions, returns and packaging contact BedRug Inc. Customer Service at 800-462-8435. Labor and shipping are not covered under the terms of this agreement.

**Retain this warranty information with your vehicle owner's manual for future reference
FOR WARRANTY SERVICE CALL 1-800-462-8435**

PRODUCT REGISTRATION

Thank you for purchasing your BedRug product! We would appreciate it if you would take a few minutes to register your purchase. Registration allows us to provide, with your permission, important updates, service information, helpful hints or warranty service should you ever require technical support. BedRug offers the option of returning product registration forms electronically, rather than having to fill them out by hand. You can be assured that BedRug does not share or sell the information you provide. Save a copy of your sales receipt. Activate your warranty by registering your product online at <http://www.bedrug.com/customer-service/product-registration.html> or by scanning the QR code. You will need the 6-digit lot and date code found on the underside of the tailgate, see example.



PN **TGC07**
DESC 07+ GMT900 TAILGATE
WO#511247 LOT # 123456
DATE: 04/13/12 TR# S1E123
MADE IN USA