

# INSTALLATION INSTRUCTIONS

## CUSTOMER SERVICE

Phone: 818-365-9000 • MON - FRI 8:30 am - 6:00 pm EST

Email: [SUPPORT@BAKINDUSTRIES.COM](mailto:SUPPORT@BAKINDUSTRIES.COM)

# RAIL REFERENCE SHEET




**REVOLVERX2**  
HARD ROLLING COVER

**REVOLVERX4**  
PREMIUM MATTE HARD ROLLING COVER

**! IMPORTANT: READ FIRST !**

Thank you for your recent purchase of a Revolver Truck Bed Cover, both spacer and angle shims are installed to the rails to provide an easy installation. Please refer to the guide on the back page for specific rail requirements.

See illustrations and refer to the guide on the back page to confirm corresponding application and rail style.

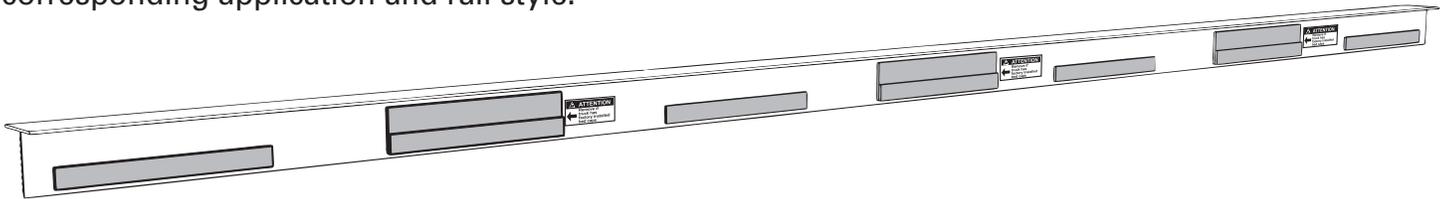


## Tech Tip

Installing the Revolver rails square to the truck bed rail is the key to a successful installation. Please note:

**FIG 1:** Some trucks have an indentation in the lower section of the bed rail.

**FIG 2:** Some trucks have a tapered clamping surface on the truck bed rail.

**FIG 3:** Some trucks have a square bed rail.

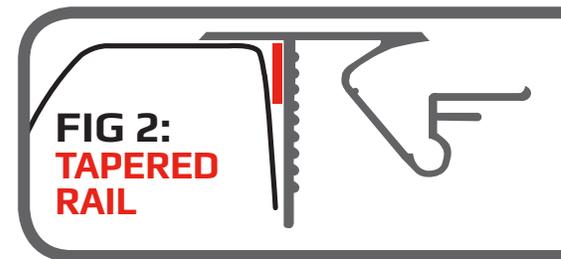

# APPLICATION & RAIL TYPES GUIDE



YEAR	MODEL DESCRIPTION	RAIL TYPE
<b>CHEVY / GMC</b>		
88 - 98	C/K (All Bed Sizes)	D
99 - 06	Silverado/Sierra (6' 6" & 8' Bed Sizes)	D
04 - 06	Silverado/Sierra Crew Cab (5' 8" Bed Size)	D
07 - 13	Silverado/Sierra (Also: 2014 HD models)	D
14 - Current	Silverado, Sierra	E
15 - Current	Colorado, Canyon	A
<b>DODGE/RAM</b>		
02 - 08	Ram	C
09 - Current	Ram (w/o Ram Box Cargo Mgmt)	B
<b>FORD</b>		
04 - Current	F-150	B
99 - 16	Super Duty	A
Current	Super Duty	B
<b>NISSAN</b>		
05 - Current	Frontier	E
04 - 15	Titan	E
16 - Current	Titan	B
<b>TOYOTA</b>		
07 - 16	Tundra	B

