



## BX1753

# 2019-2026 GMC Sierra 1500 New Style (All Models) (No AEV Bumper) Installation Instructions

Please read **BOTH** these Installation Instructions and the General Information sheet prior to installing or operating this equipment.

1. Blue Ox® towing products and accessories are intended to be installed by Blue Ox® Dealers who are familiar with our products and have the equipment and knowledge necessary to do "fit work". If needed, Blue Ox® Dealers can be found at [www.blueox.com](http://www.blueox.com) or by contacting our Technical Service Department at (402) 385-3051.
2. Many Blue Ox® baseplates are designed to use existing holes and hardware to mount the baseplate to the towed vehicle. Even though bolts are there, do not assume they are adequate for baseplate mounting. Always use the hardware supplied in the hardware kit and existing hardware as specified in the installation instructions.



If the front of your vehicle looks different than this, please contact us at (402)385-3051.

**Serial Number**

**Attachment Tab Height: 21.5"**

**Attachment Tab Width: 30"**

### Bolt Torque Specifications

Torque in Foot-Pounds for Inch Bolts

| Bolt Size | Grade 5 | Grade 8 |
|-----------|---------|---------|
| 1/4"      | 10      | 14      |
| 5/16"     | 19      | 29      |
| 3/8"      | 33      | 47      |
| 7/16"     | 54      | 78      |
| 1/2"      | 78      | 119     |
| 5/8"      | 154     | 230     |
| 3/4"      | 257     | 380     |

### Bolt Torque Specifications

Torque in Foot-Pounds for Metric Bolts

| Bolt Size | Grade 8.8 | Grade 10.9 |
|-----------|-----------|------------|
| 6MM       | 6         | 8          |
| 8MM       | 16        | 22         |
| 10MM      | 31        | 40         |
| 12MM      | 54        | 70         |
| 14MM      | 89        | 117        |
| 16MM      | 161       | 230        |
| 18MM      | 222       | 318        |



## WARNING

Failure to read and follow these instructions could result in separation of the towed vehicle from the tow bar, causing property damage, loss of towed vehicle, personal injury or death.

BX1753  
2019-2026 GMC Sierra 1500 New Style (All Models) (No AEV Bumper)  
Installation Instructions

**Reference your vehicle owner's manual for manufacturer's towing specifications.**

**Instruction Notes:** The bumper, grille, fascia and fascia cover are removed and reinstalled for the baseplate installation. Some drilling and trimming is required.

Place all components that are removed on a flat, sturdy surface. All items will be reinstalled unless otherwise noted after the baseplate is installed.

The dimensional variations between otherwise identical vehicles can be considerable. While the baseplate was designed for easy installation, it may be necessary to tailor the baseplate slightly to compensate for vehicle manufacturer's tolerances.

The BX8869 Tail Light Wiring Kit is recommended for vehicles without LED lights and the BX8848 Tail Light Wiring Kit is recommended for vehicles with LED.



Drill a hole according to the tail light wiring kit instructions.


## **NOTICE**

- Handling of some cosmetic parts when installing this product may require the use of protective covers, rags, specialty tools, etc. to prevent damage.
- When using power drills be aware of the dangers of torque and drill bit length.
- When using a reciprocating saw be aware of objects behind the cutting surface.
- Use a good quality paint to spray cut edges of frame to prevent rusting.
- Be sure that **ALL** electrical connections are plugged in and accessories are functioning properly before reinstalling the fascia.
- The baseplate is computer tested to your vehicle's GVWR, exceeding this weight will void the manufacturer's warranty.
- Be sure to use a sufficient amount of Loctite® Red on all bolt threads before tightening. Tighten all bolts according to the torque chart provided unless specified.
- Dealer or installer be certain the user receives these instruction sheets.
- If the baseplate is in an accident, it must be replaced. **DO NOT** use it again! An accident can cause unseen damage and using it again could result in more damage or serious injury. **DO NOT** use the baseplate if it is damaged or missing parts.

# BX1753

## 2019-2026 GMC Sierra 1500 New Style (All Models) (No AEV Bumper)

### Installation Instructions

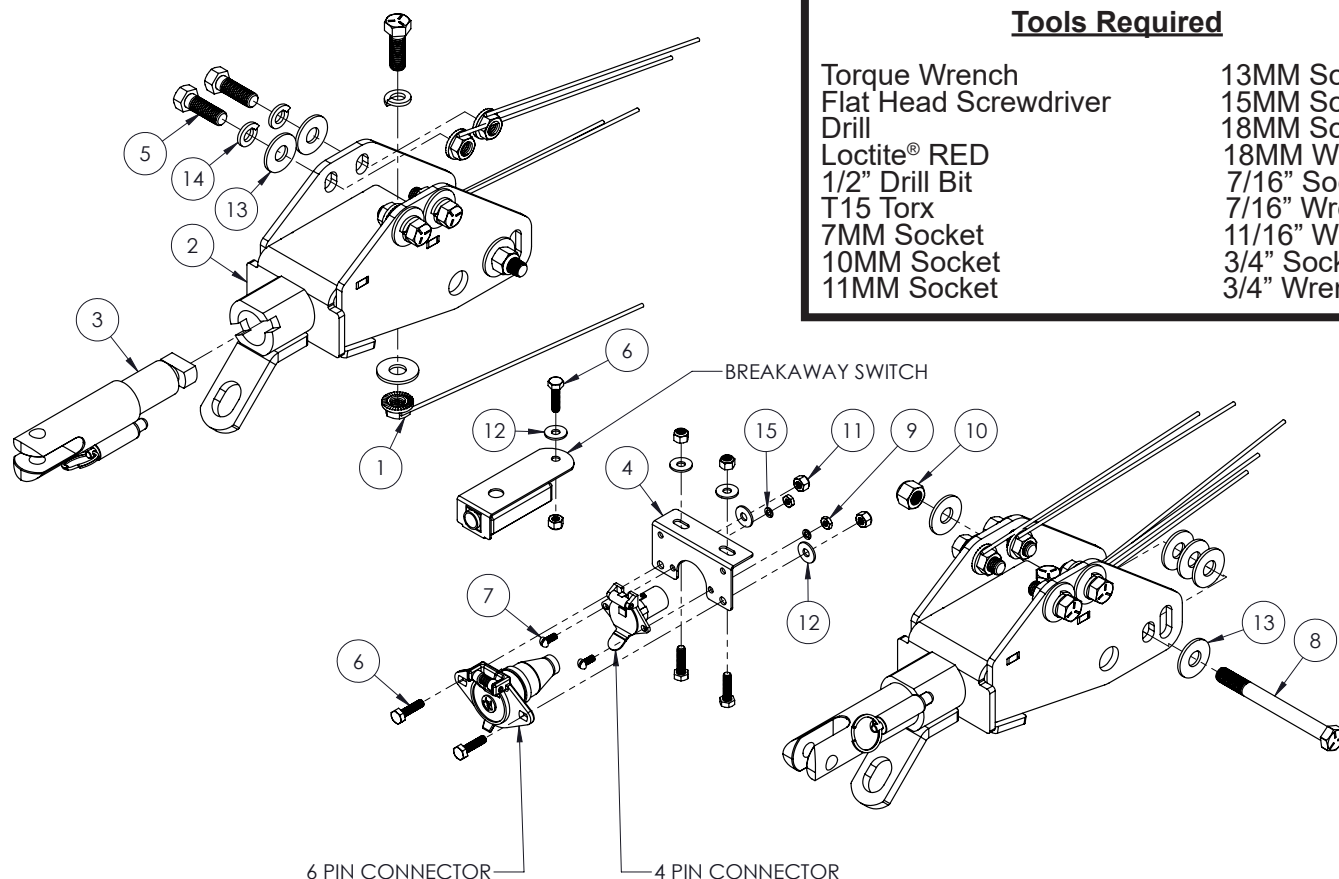

#### Tools Required

|                       |               |
|-----------------------|---------------|
| Torque Wrench         | 13MM Socket   |
| Flat Head Screwdriver | 15MM Socket   |
| Drill                 | 18MM Socket   |
| Loctite® RED          | 18MM Wrench   |
| 1/2" Drill Bit        | 7/16" Socket  |
| T15 Torx              | 7/16" Wrench  |
| 7MM Socket            | 11/16" Wrench |
| 10MM Socket           | 3/4" Socket   |
| 11MM Socket           | 3/4" Wrench   |

| Item No. | Part No.            | Description                                       | Qty. |
|----------|---------------------|---|------|
| 1.....   | 61-4029             | 1/2"-13 Whiz Nut w/ 10" Wire .....                | 10   |
| 2.....   | 61-8551             | BX1753 Baseplate.....                             | 2    |
| 3.....   | 62-3468             | Attachment Tab Assembly with Hole .....           | 2    |
| 4.....   | 101-6135            | Electrical Bracket, 90° Bend.....                 | 1    |
| 5.....   | 201-0051            | 1/2"-13 x 1-1/2" Hex Head Bolt, Grade 5, ZP ..... | 10   |
| 6.....   | 201-0071            | 1/4"-20 x 1" Hex Head Bolt, Grade 5, ZP .....     | 5    |
| 7.....   | 201-0192            | #10-32 1/2" Round Slotted Head Screw.....         | 2    |
| 8.....   | 201-0786            | 1/2"-13 x 5" Hex Head Bolt, Grade 5, ZP .....     | 2    |
| 9.....   | 202-0047            | #10-32 Hex Nut .....                              | 2    |
| 10.....  | 202-0094            | 1/2"-13 Hex Nylon Insert Lock Nut, ZP.....        | 2    |
| 11.....  | 202-0102            | 1/4"-20 Hex Nylon Nut, ZP .....                   | 5    |
| 12.....  | 203-0001            | 1/4" Flat Washer, ZP.....                         | 5    |
| 13.....  | 203-0005            | 1/2" Flat Washer .....                            | 20   |
| 14.....  | 203-0012            | 1/2" Lock Washer, ZP .....                        | 10   |
| 15.....  | 203-0054            | #10 Lock Washer, ZP .....                         | 2    |
| 16.....  | 226-0049(not shown) | Class IV Safety Cables.....                       | 2    |
| 17.....  | 229-0512(not shown) | 1/2" Quicklink, ZP .....                          | 2    |
| 18.....  | 290-0437(not shown) | Black Cap Plug Receiver.....                      | 2    |


#### **Important:**

Use only genuine factory replacement parts on your baseplate. Do **NOT** substitute homemade or non-typical parts. If a bolt is lost or in need of replacement, for your safety and the preservation of your baseplate, be sure to use a replacement bolt of the same grade (In most cases it will be Grade 5, please reference the parts list above). Replacement parts may be ordered through your nearest Blue Ox® Dealer or Distributor. Failing to follow and/or altering these installation instructions in either installation or required equipment will void the manufacturer's warranty. Towing behind a non-motorized vehicle will void the warranty.






BX1753  
2019-2026 GMC Sierra 1500 New Style (All Models) (No AEV Bumper)  
Installation Instructions

**2019 - 2022 Limited Models Fascia & Bumper Removal**

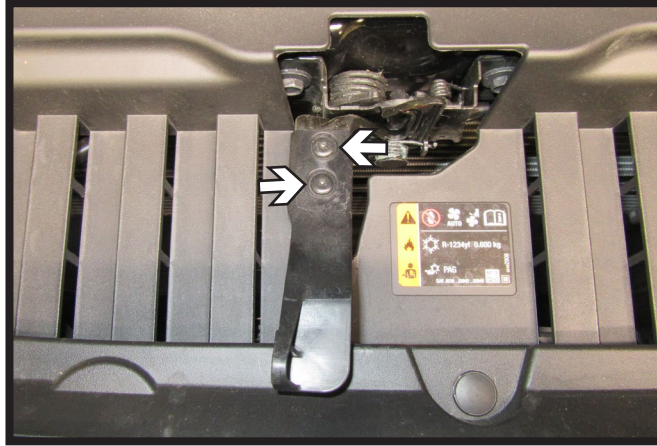



1. Using a T15 Torx, remove the two (2) bolts from the handle on the top edge of the fascia. Remove and set aside to be reinstalled later.

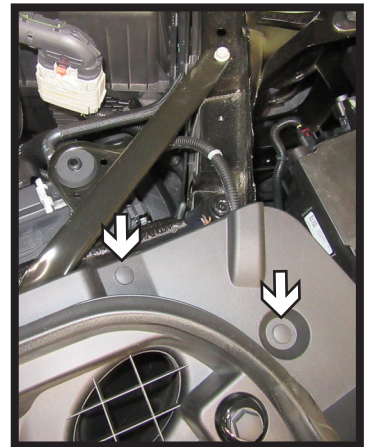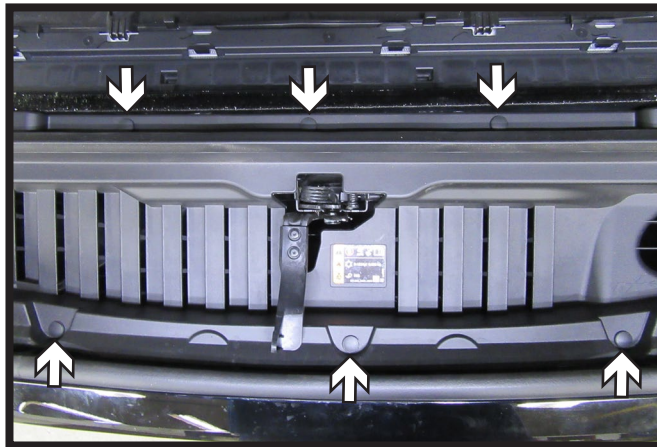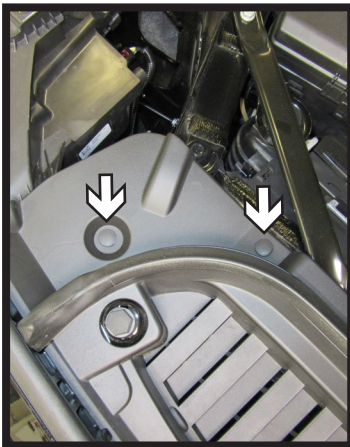

2. Remove the ten (10) push pins from along the top of the fascia. Remove fascia cover and set aside to be reinstalled later.

BX1753

## 2019-2026 GMC Sierra 1500 New Style (All Models) (No AEV Bumper) Installation Instructions

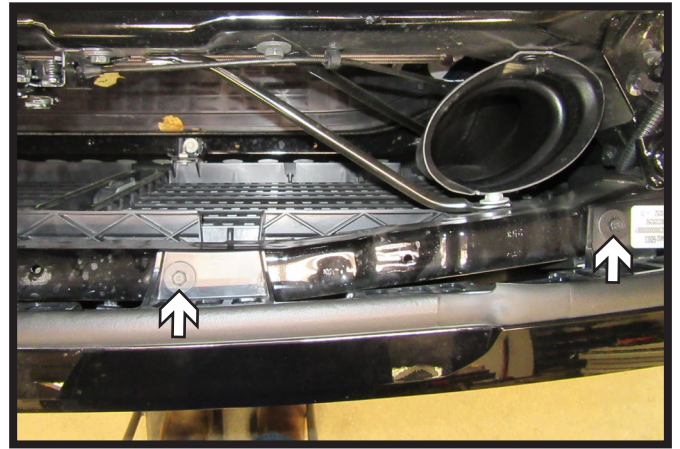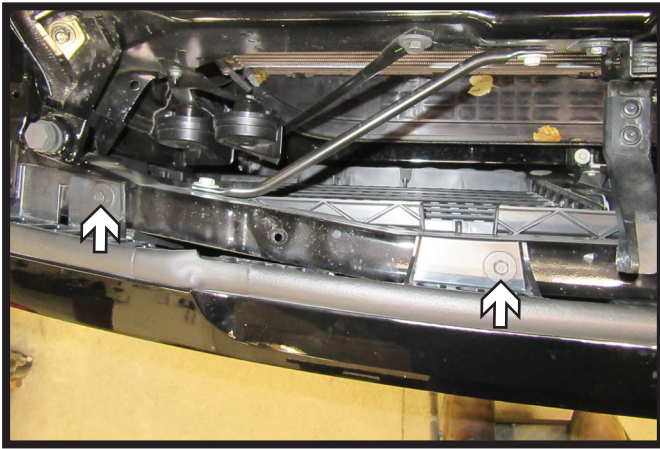

3. Using a 10MM socket, remove the four (4) bolts, two (2) on each side from the top of the fascia.




4. Using a T15 Torx, remove the two (2) bolts from the wheel well edge. Do this on both sides of the vehicle.




# 2019-2026 GMC Sierra 1500 New Style (All Models) (No AEV Bumper) Installation Instructions



5. Unclip the fender flare past the fascia joint. Prop trim away from the vehicle using a soft cloth. Then using a 7MM socket, remove the one (1) bolt from the fascia joint. Do this on both sides of the vehicle.

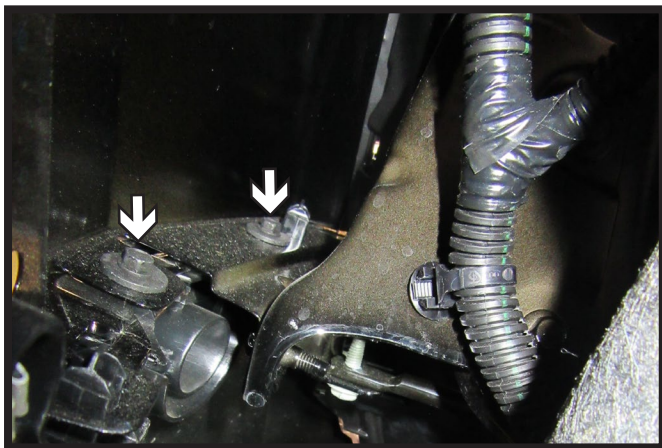




6. Pull back the wheel well liner. Using a 10MM socket, remove the two (2) bolts as indicated. Do this on both sides of the vehicle.

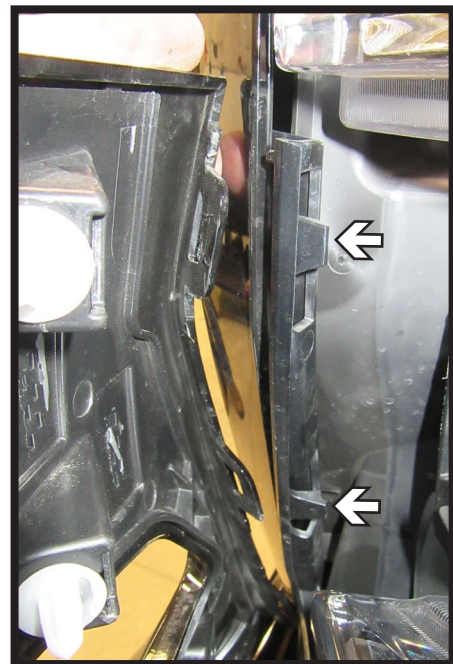

7. Unclip the plastic piece in the center of the headlight by pushing toward the center of the vehicle. Do this on both sides of the vehicle.

## BX1753

### 2019-2026 GMC Sierra 1500 New Style (All Models) (No AEV Bumper) Installation Instructions

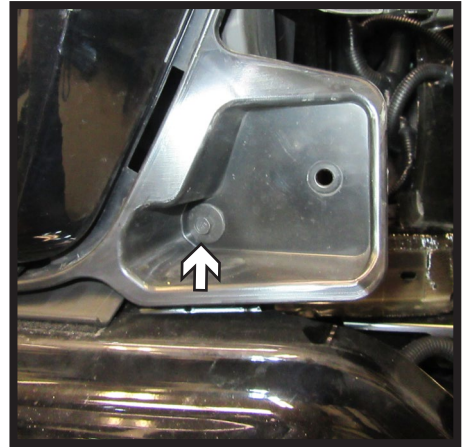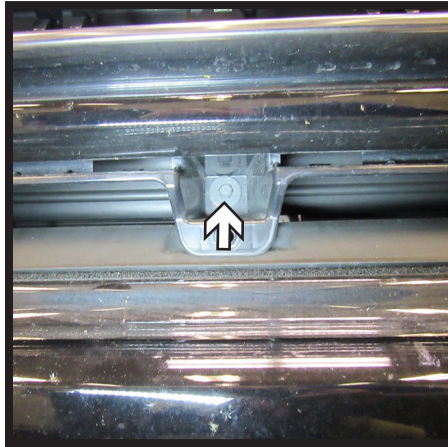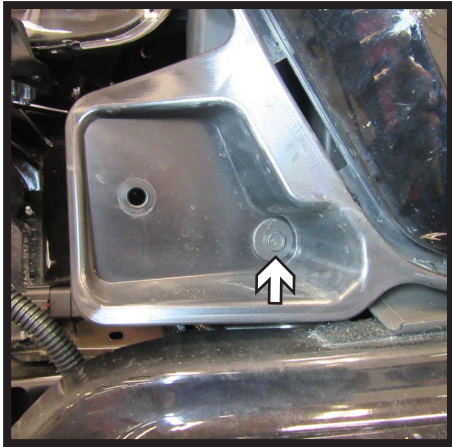


8. Using a 10MM socket, remove the three (3) bolts from the fascia, one (1) in the center and one (1) on each side.




9. Reach from the top inside of the vehicle to release the four (4) clips connecting the grille to the frame. Remove fascia and set aside to be reinstalled later.




# 2019-2026 GMC Sierra 1500 New Style (All Models) (No AEV Bumper) Installation Instructions

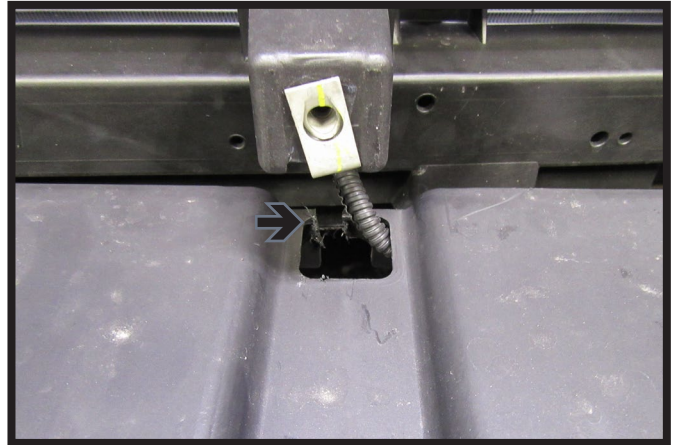

10. Remove seven (7) push pins on the underside of the plastic shroud. Then, either unplug the electrical as indicated (white) or slot the plastic shroud (black) to allow removal. Remove piece and set aside to be reinstalled later.

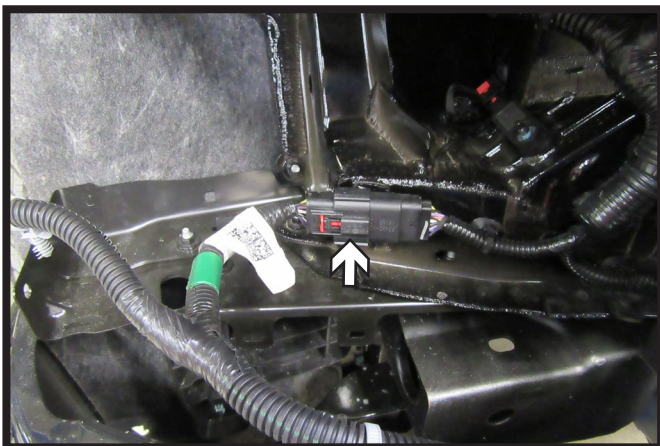


11. On the passenger side of the vehicle unplug the main wiring harness.

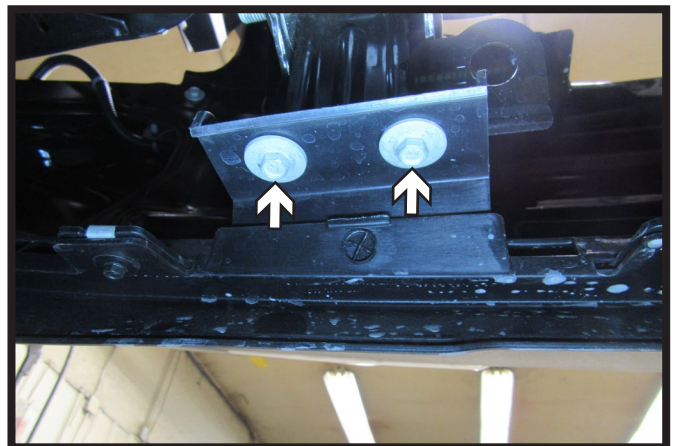


12. Using a 10MM socket, remove the two (2) bolts on the underside of the bumper. Do this on both sides of the vehicle.




# 2019-2026 GMC Sierra 1500 New Style (All Models) (No AEV Bumper) Installation Instructions

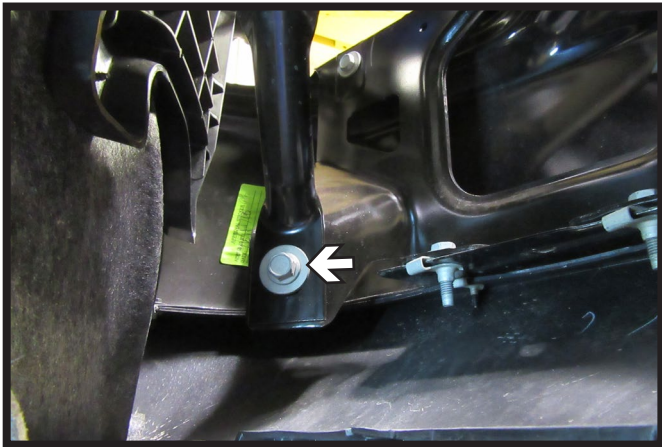

13. On the underside of the vehicle, use a 15MM socket to remove the one (1) bolt holding the bracket. Do this on both sides of the vehicle.

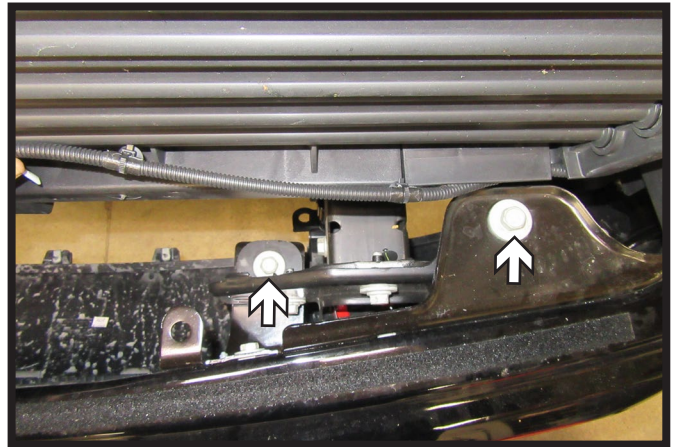

14. Using an 18MM socket, remove the two (2) bolts from the bumper. Do this on both sides of the vehicle. Remove bumper and set aside to be reinstalled later.

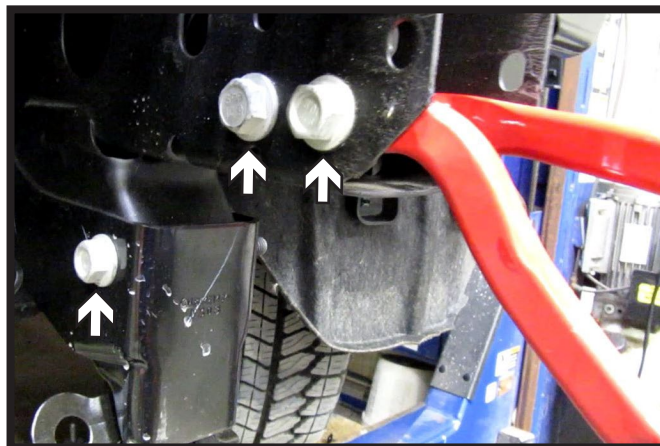


15. Remove the plastic piece from the tow hook. Then using an 18MM socket, remove the three (3) bolts. Do this on both sides of the vehicle. Remove tow hook, it will not be reinstalled later.




**Continued on page 18**

BX1753  
2019-2026 GMC Sierra 1500 New Style (All Models) (No AEV Bumper)  
Installation Instructions

**2022 - 2025 Models Fascia & Bumper Removal**

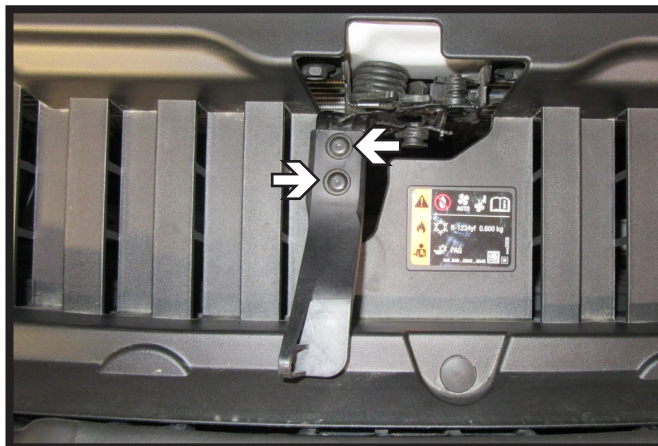


1. Using a T15 Torx, remove the two (2) bolts from the handle on the top edge of the fascia. Remove and set aside to be reinstalled later.

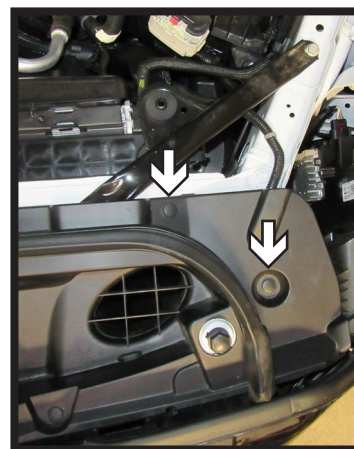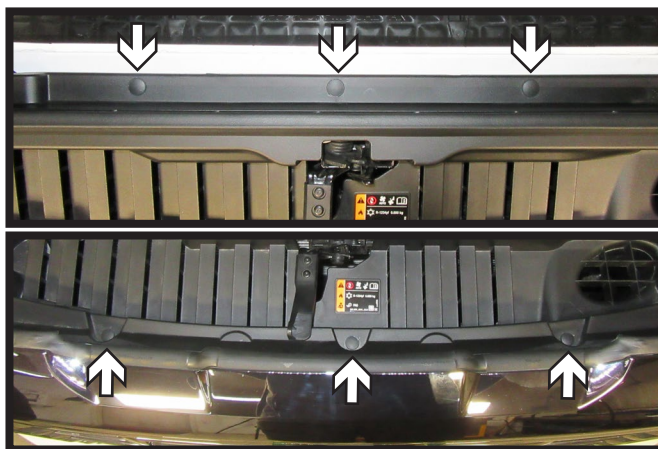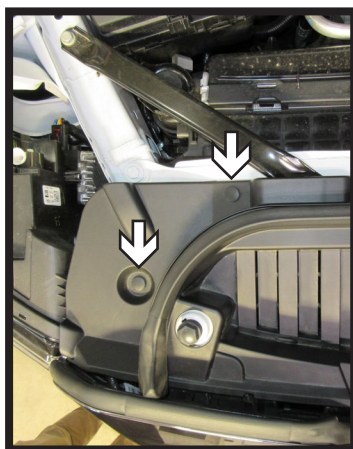


2. Remove the ten (10) push pins from along the top of the fascia. Remove fascia cover and set aside to be reinstalled later.




# 2019-2026 GMC Sierra 1500 New Style (All Models) (No AEV Bumper) Installation Instructions

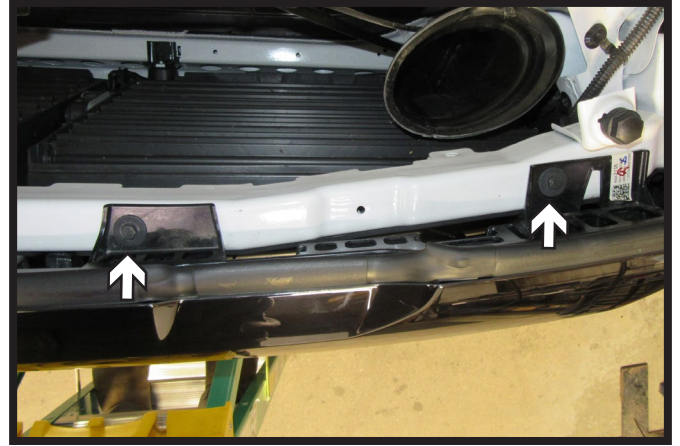

3. Using a 10MM socket, remove the four (4) bolts, two (2) on each side from the top of the fascia.

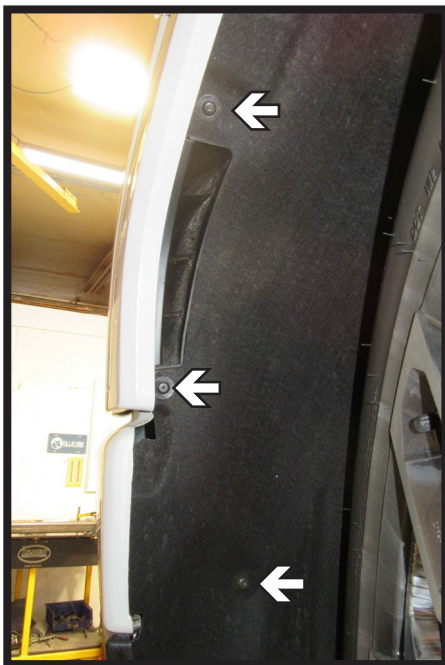

4. Using a T15 Torx, remove the three (3) bolts from the wheel well. Do this on both sides of the vehicle.

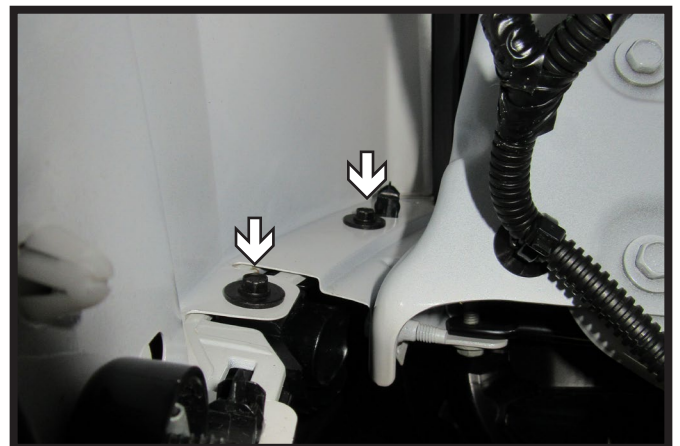


5. Pull back the wheel well liner. Using a 10MM socket, remove the two (2) bolts from the fascia joint. Do this on both sides of the vehicle.




BX1753  
2019-2026 GMC Sierra 1500 New Style (All Models) (No AEV Bumper)  
Installation Instructions



6. Pop the push pin out on each corner of the wheel well trim (left). Pull down on the trim to remove (right). Set trim aside to be reinstalled later. Do this on both sides of the vehicle.

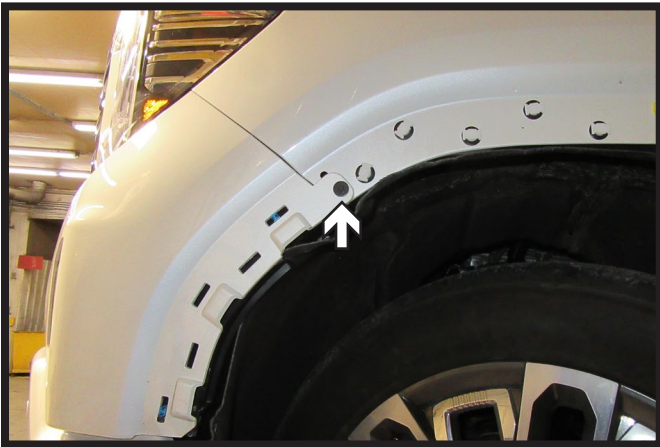


7. Using a 7MM socket, remove the one (1) bolt from the fascia joint. Do this on both sides of the vehicle.

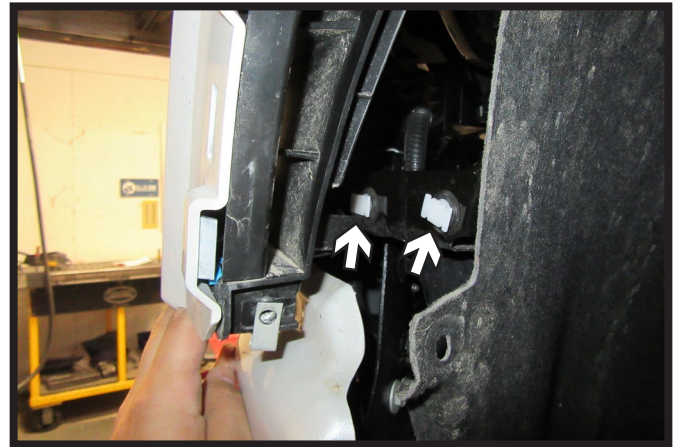

8. Start to pull outward at the corner of the center fascia piece. Remove the two (2) push pins. A small plastic piece will be removed. Set piece aside to be reinstalled later. Do this on both sides of the vehicle.

# 2019-2026 GMC Sierra 1500 New Style (All Models) (No AEV Bumper) Installation Instructions

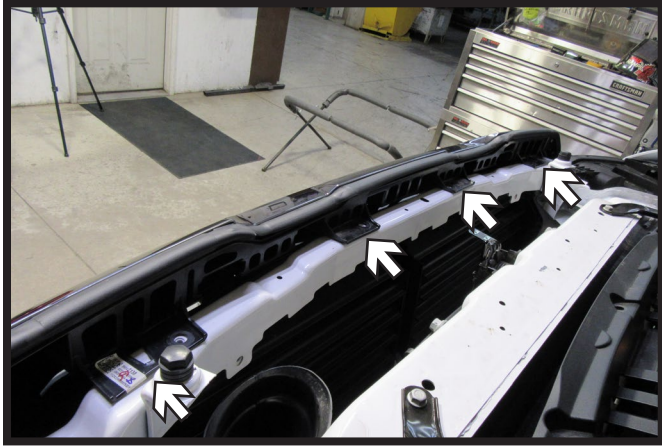

9. Pull up on the four (4) grille pieces on top of the vehicle to release the top of the grille.



10. Release the fourteen (14) clips long the top of the center fascia piece. These can be accessed from the top of vehicle.




11. Reaching between the bumper and center fascia piece, pull up on the center piece to release the three (3) clips on the bottom of the piece.




12. As the center fascia piece is removed, unplug the one (1) electrical from each side of the vehicle. Set piece aside to be reinstalled later.



BX1753  
2019-2026 GMC Sierra 1500 New Style (All Models) (No AEV Bumper)  
Installation Instructions

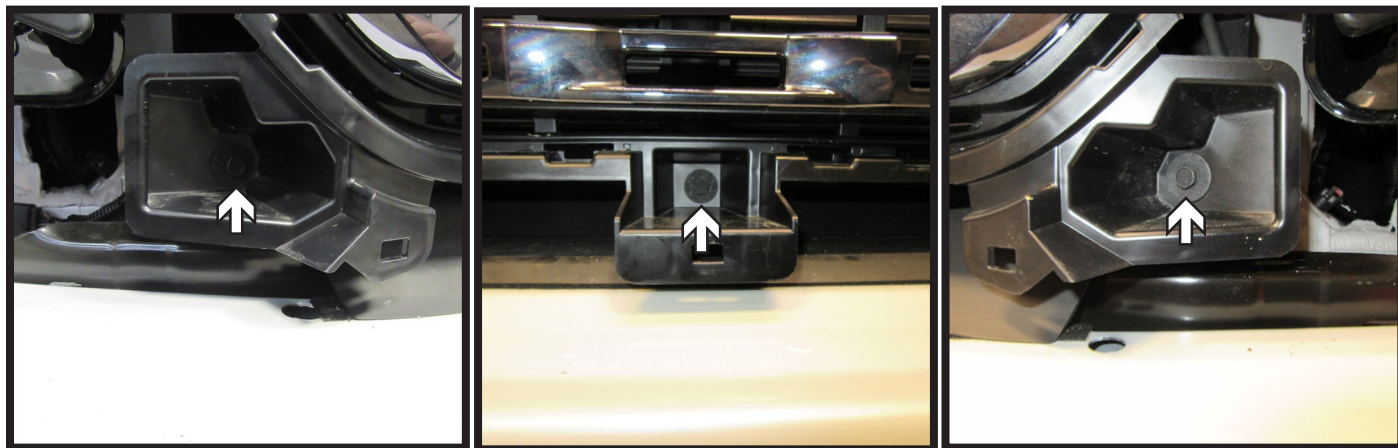

13. Using a 10MM socket, remove the three (3) bolts below the grille.

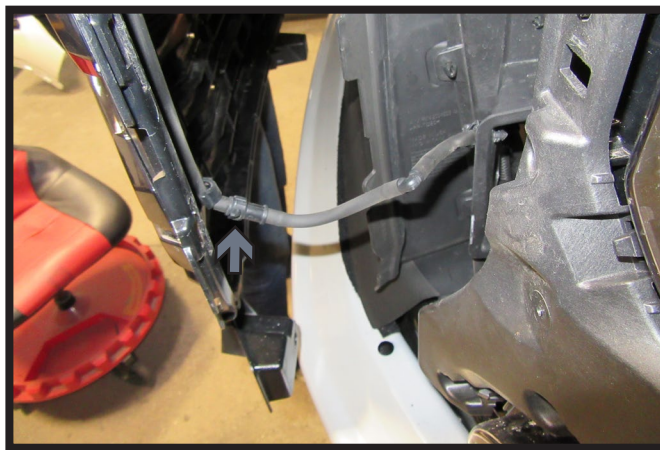

14. As the grille is removed, unplug the one (1) electrical (white) from the passenger side of the vehicle and one (1) hose (gray) from the driver side. Remove grille and set aside to be reinstalled later.



# 2019-2026 GMC Sierra 1500 New Style (All Models) (No AEV Bumper) Installation Instructions




15. Using a 10MM socket, remove the four (4) bolt from the underside of the vehicle.



16. Using a 15MM socket, remove the one (1) bolt attaching the bracket. Do this on both sides of the vehicle.




17. Using an 18MM wrench, remove the one (1) bolt behind the bumper. Do this on both sides of the vehicle.

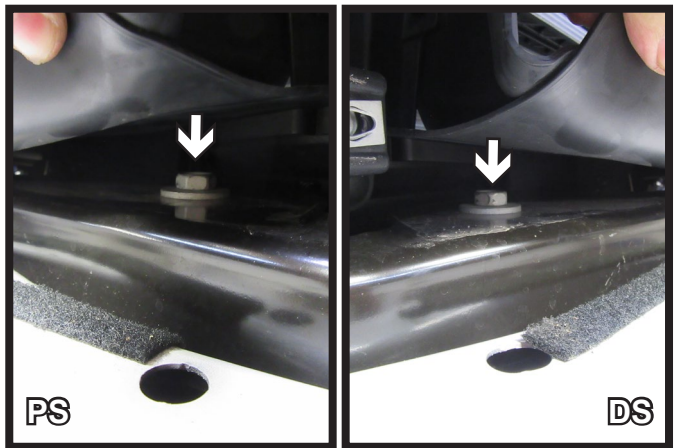


18. Using an 18MM socket, remove the two (2) bolts, one (1) on each side, from the top of the bumper.


# 2019-2026 GMC Sierra 1500 New Style (All Models) (No AEV Bumper) Installation Instructions

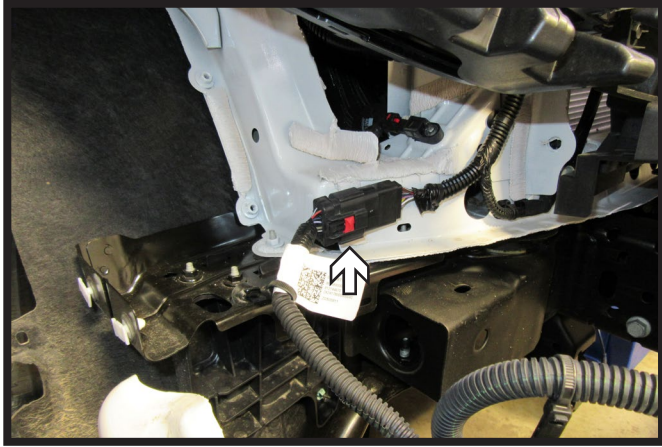


19. As the bumper is removed, disconnect the one (1) electrical connection on the passenger side of the vehicle. Set bumper aside to be reinstalled later.

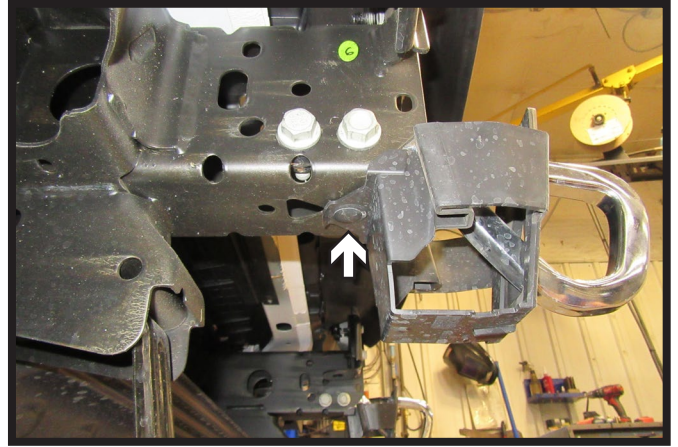

20. Remove the one (1) push pin from the bottom of the plastic piece around the tow hook. Remove piece, it will not be reinstalled. Do this on both sides of the vehicle.

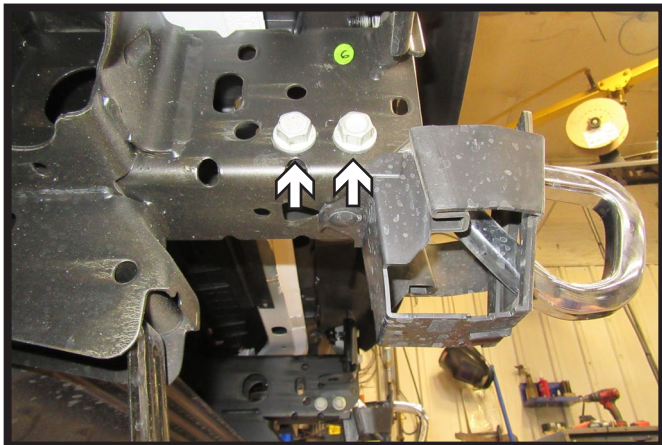


21. Using an 18MM socket, remove the two (2) bolts from the tow hook. Remove tow hook, it will not be reinstalled. Do this on both sides of the vehicle.

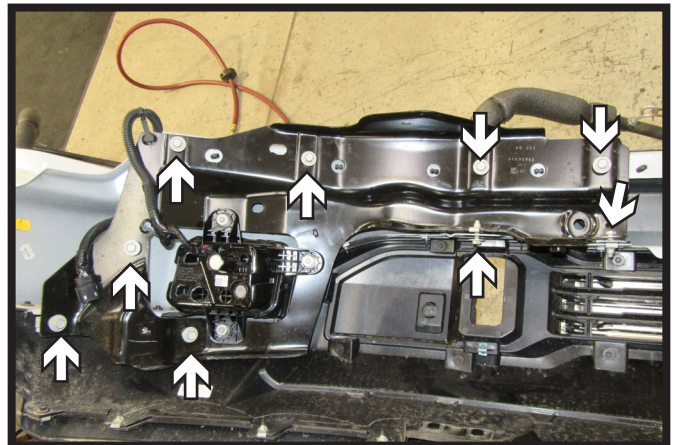


22. Using a 13MM socket, remove the nine (9) bolts from the metal piece on the back of the bumper on the driver side.



# 2019-2026 GMC Sierra 1500 New Style (All Models) (No AEV Bumper) Installation Instructions

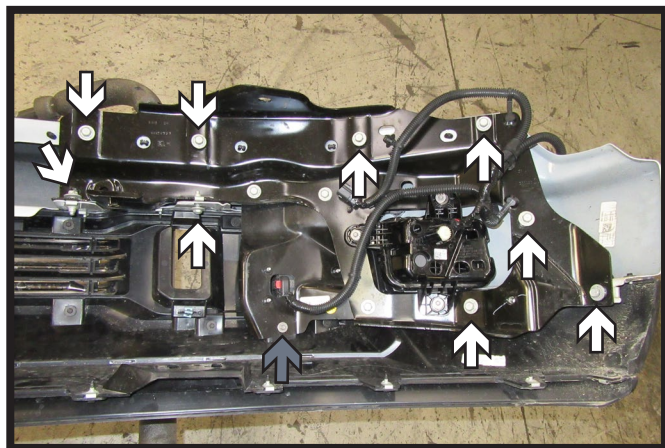

23. Using a 13MM socket, remove the nine (9) bolts (white) from the metal piece on the back of the bumper on the passenger side. Then using a 7MM socket, remove the one (1) bolt (gray).

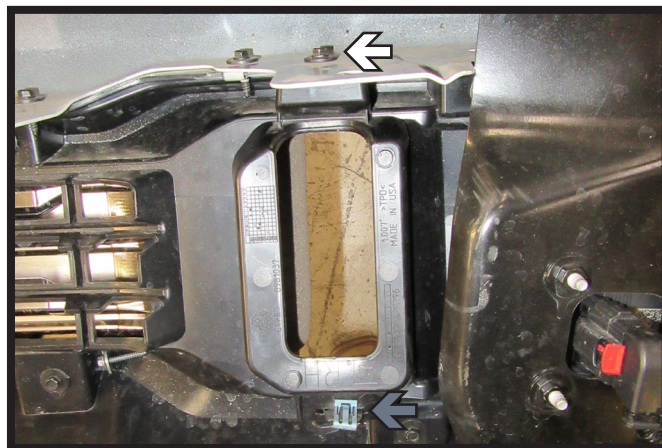


24. Rotate metal piece out of the way. Using a 7MM socket, remove the one (1) bolt (white) at the top of the tow hook cover. Then unclip cover at the bottom (gray). Remove tow hook cover, it will not be reinstalled. Reinstall metal piece. Do this on both sides of the vehicle.

Continued on page 18




## 2019-2026 GMC Sierra 1500 New Style (All Models) (No AEV Bumper) Installation Instructions

### Baseplate Installation

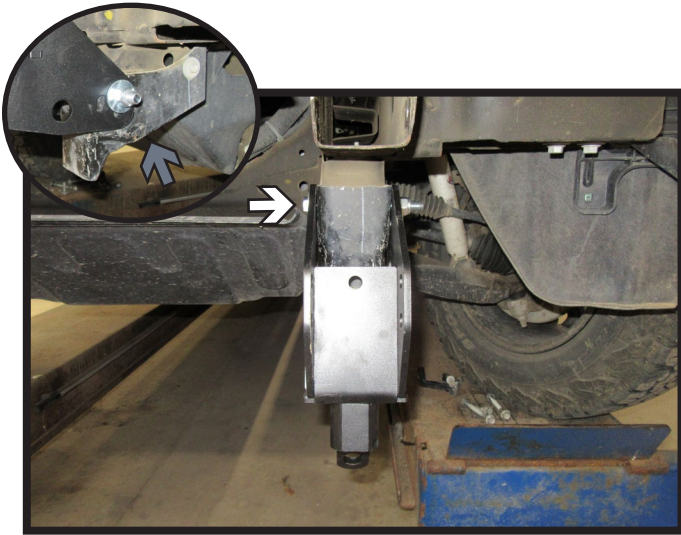

1. Slide baseplate onto tow hook housing so that the back slotted hole of the baseplate lines up with back hole on housing. Insert the one (1) 1/2" x 5" bolt as shown. Leave loose at this time. Do this on both sides of the vehicle.


**Note:** On some vehicles, the bracket on the tow hook housing must be removed for the baseplate to fit on the vehicle (inset).

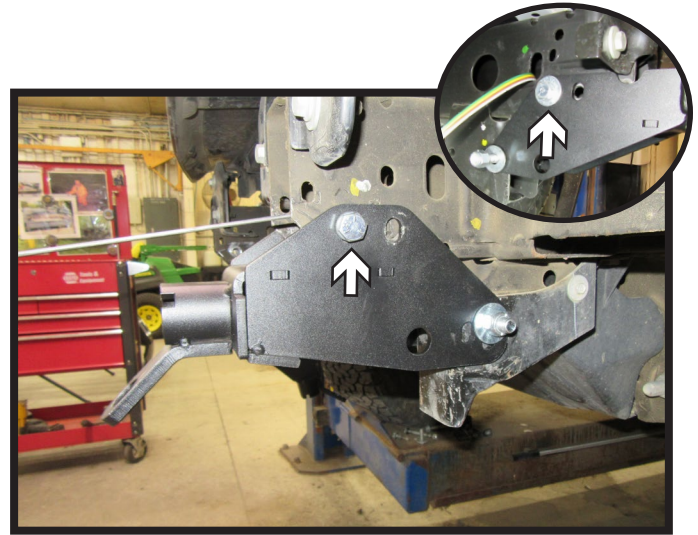

2. Rotate baseplate upward and install the outer front and inner back 1/2" bolts with hardware. Remove the back lower bolt, apply Loctite Red and reinstall. Do this on both sides of the vehicle.

**Note:** If top front holes do not line up, the back lower bolt may need to be switched to the other slotted hole.


**\*\* Use Loctite® Red on all bolt threads and tighten all bolts to the appropriate torque. \*\***

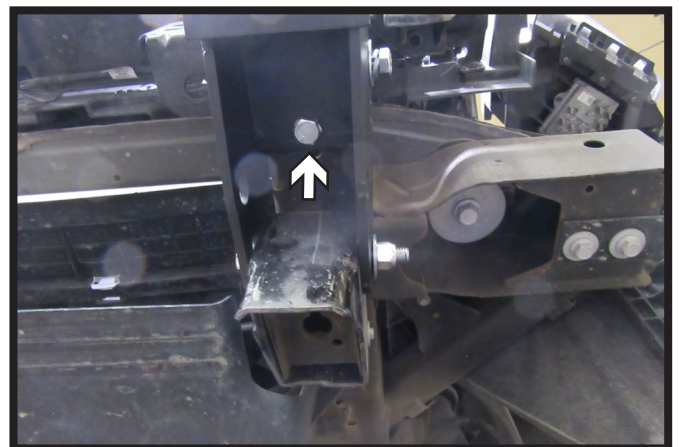


3. Using a 1/2" drill bit, drill the top rear hole on the side of the baseplate (left) and the bottom hole (right), using the baseplate as a template. Do this on both sides of the vehicle.

## BX1753

### 2019-2026 GMC Sierra 1500 New Style (All Models) (No AEV Bumper) Installation Instructions

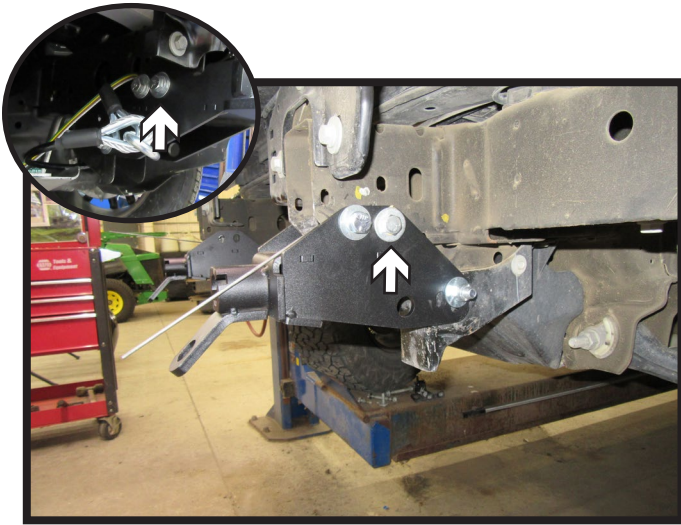


4. Install the inner front and outer back 1/2" bolts with hardware. Do this on both sides of the vehicle.

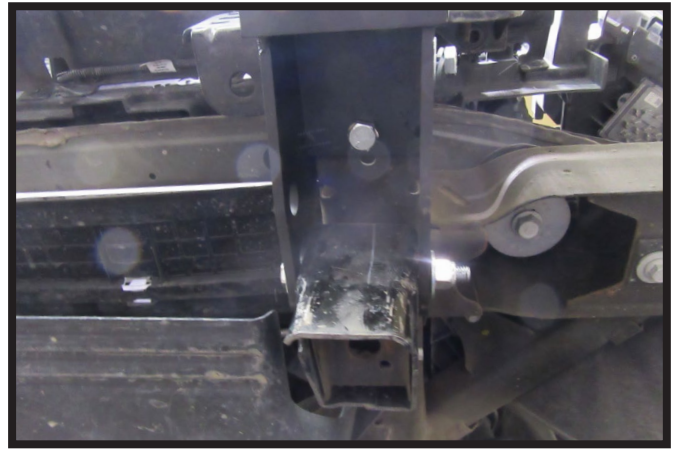

5. Install the 1/2" bolt with hardware into the bottom bolt of the baseplate. Do this on both sides of the vehicle.

**\*\* Use Loctite® Red on all bolt threads and tighten all bolts to the appropriate torque. \*\***

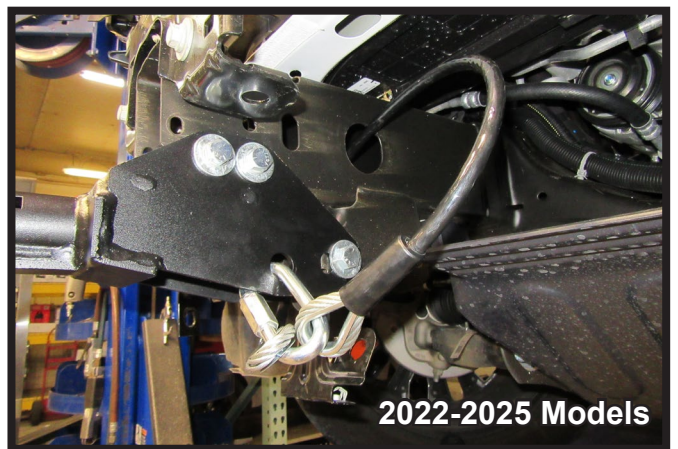

6. Attach the permanent baseplate safety cables to the provided convenience link on the baseplate. The photo above shows the recommended installation of the cables to frame of vehicle. Additional options may interfere with suggested mounting; in this case, secure the cables to a solid piece of the frame as described in the General Information sheet. Be sure the safety cables do not rub against any hoses or moving parts. Do this on **BOTH** sides of the vehicle.



BX1753

## 2019-2026 GMC Sierra 1500 New Style (All Models) (No AEV Bumper) Installation Instructions



7a. Reinstall the bumper, fascia, fascia cover and reconnect all electrical.



7b. Reinstall the bumper, grille, fascia, fascia cover. Reconnect all electrical and hoses.

### CUSTOMER SERVICE COMMITMENT

Blue Ox® is committed to providing you with exceptional customer care throughout your lifetime with our products. Our team is here to assist you with any questions you may have regarding the performance of your product. Simply call (402) 385-3051 and you can speak with our technical service team.

Additionally, please visit our website to see which rallies our Destination America team will be attending. For a nominal fee, our service technician will service your towing system to ensure it's in proper working condition. Also, as a commitment to our customers, should you visit our factory, you can stay at our full service Blue Ox® campground at no charge along with enjoying a factory tour.

Again, thank you for being our customer and for the confidence you have shown in the performance of our products. It is because of customers like you we enjoy the success we have today.

© 2024 Blue Ox  
One Mill Road, Industrial Park  
Pender, Nebraska 68047  
Phone: (402) 385-3051  
Fax: (402) 385-3360  
[www.blueox.com](http://www.blueox.com)



## General Information

1. Ensure that your product(s) are registered online at [www.blueox.com](http://www.blueox.com). It is crucial to register your product(s) so that you may be alerted of product offerings, updates, upgrades, maintenance and safety bulletins, and/or recalls.
2. **It is the owner's responsibility to inspect all towing equipment for cracked welds, missing or worn parts and loose bolts before each towing trip.** Be sure to use Loctite® Red on all bolts and tighten to the recommended specifications.
3. **It is the owner's responsibility to hook up all towing equipment per manufacturer's instructions/ recommendations.**
4. Remove the attachment tabs when not in use (if applicable).

## Notice To Baseplate Installer

### 1. It is YOUR responsibility to watch for:

- Oil cooler and air conditioner lines
- Electrical wires and hoses
- Missing parts or attaching points on the frame

**\*\* If the baseplate is improperly installed and is against a wire or hose, it could cause fluid leaks or electrical shorts some time after the actual baseplate installation.**

## Permanent Baseplate Safety Cable Installation


Permanent baseplate safety cables are strongly recommended when towing a vehicle with a tow bar. The principle function of the permanent baseplate safety cables is to prevent the towed vehicle from breaking loose in the event the connection between the frame of the towed vehicle and the baseplate fails or becomes disconnected. The cables must be connected from the baseplate to the frame rail or cross member of the vehicle's frame. The illustrations below show the possible arrangements recommended by Blue Ox®. Each permanent baseplate safety cable must have an adequate weight rating for the towing system. The weight rating of the two (2) cables together will not qualify.

***Do not mount the permanent baseplate safety cables against wires, hoses or brake lines.***

These permanent baseplate safety cables should remain installed as long as the baseplate is installed on the vehicle. Permanent baseplate safety cables are to be used in conjunction with, and NOT a replacement for legally required safety cables attaching the towed vehicle to the towing vehicle.

### Option #1

(Baseplates with Convenience Link Tabs)

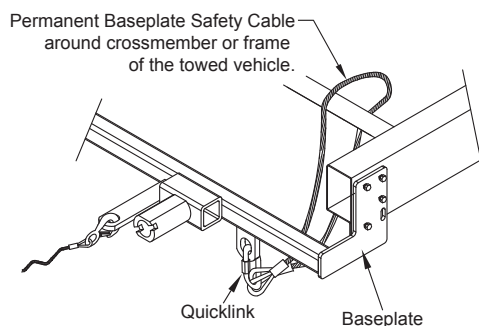

### Option #2

(Baseplates with out Convenience Link Tabs)



# BLUE OX ORIGINAL PURCHASERS THREE YEAR LIMITED WARRANTY

Automatic Equipment Manufacturing Company ("Automatic") warrants to the original (first) retail purchaser that this product, manufactured by Automatic, shall be free from defect in material and workmanship under normal use and service for a period of three years from the date of delivery.

During said three-year period, Automatic will repair or replace any parts that have been returned by the original purchaser, to the factory, transportation prepaid, and in Automatic's sole and absolute opinion found to be defective.

## Limitations on Warranty Coverage:

Coverage under this warranty will be valid only if the customer warranty card is returned by the original purchaser within 30 days of purchase.

Coverage under this warranty will be effective only when a copy of the original invoice, showing date and place of purchase, accompanies any claim for warranty. This warranty is NON TRANSFERABLE.

This limited warranty will not cover, in any way or form, any alleged damages caused by incorrect or improper installation, improper use, modification or neglect of product, failure to properly service and maintain, misuse, act of God, accident or failure of the user to follow guidelines contained in the instructional material provided by Automatic.

This warranty does not cover normal wear and tear, paint or rust.

Warrantor assumes no responsibility to the owner for loss of use of product, loss of time, inconvenience or any other damage consequential or otherwise. Including, but not limited to mileage, expense of transporting of product, return shipping expense, mechanics travel time, telephone, road service, towing, and rental during repairs, travel, lodging, loss or damage to personal property or loss of earnings.

**REPAIR OR REPLACEMENT AS SET FORTH IN THIS LIMITED WARRANTY IS THE SOLE EXCLUSIVE REMEDY OF THE PURCHASER. AUTOMATIC SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN LENGTH TO THE DURATION OF THIS WARRANTY.**

Please visit <http://blueox.com/warranty/> to register your warranty



**BLUE OX**