



STEP 1 – PRIOR TO INSTALLATION

- A) Bushwacker®** only approves installing the trail armor according to these written instructions with the hardware provided. **WARNING:** Failure to install according to these instructions will invalidate the warranty. This includes, but is not limited to using alternative installation methods, hardware, or materials. **DO NOT USE:** Loctite, SuperGlue, or similar products on the hardware or the trail armor.

NOTE: Ambient temperature and part temperature must be at least 60°F (16°C) for proper adhesion.

- B) Fit:** Verify the fit of the trail armor to vehicle. (Some filing, sanding, or cutting may be necessary to ensure proper fit).
- C) Painting:** (Optional) if paint is desired it must be done prior to installing trail armor on the vehicle. Clean outer surface with a good grade degreaser. **DO NOT USE LACQUER THINNER OR ENAMEL REDUCER AS A DEGREASER.** Wipe outer surface thoroughly with a tack rag prior to paint. Application of plastic adhesion promoter for TPO plastic as per your paint system manufacturer's recommendations is required. Paint trail armor using a high quality enamel, or polyurethane automotive paint.
- D) Decals:** Trail Armor may interfere with existing decals on vehicle. If you wish, remove decals prior to installation of trail armor.

Ford Bronco Trail Armor® Rear Corner Guard

Set Part #14124

BW14123 Rev-0 12-09-2020

For complete fitment info visit: www.bushwacker.com

TOOLS FOR EASY INSTALLATION:

- Cleaning cloth
- Utility knife



The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



LIMITED LIFETIME WARRANTY AGAINST ANY MANUFACTURING DEFECTS

- To claim a warranty, you must provide Proof of Purchase.

Included in Hardware Kit:

1.



ALCOHOL
PREP
PAD
2 pcs.


Installation Procedures

1


Before beginning installation, you must determine if your vehicle is equipped with the Blind Spot Information System (BLIS®) from the factory. If so, you will need to trim a portion of the Trail Armor Corner Guard before proceeding.

If BLIS® is equipped, proceed to **Step 2**.

If BLIS® is NOT equipped, proceed to **Step 4**.

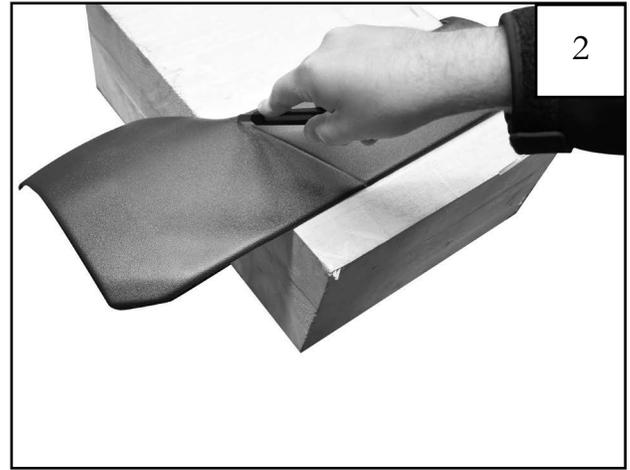


Place Trail Armor Corner on a stable surface and carefully use a utility knife or other cutting utensil to trim along the indented line.

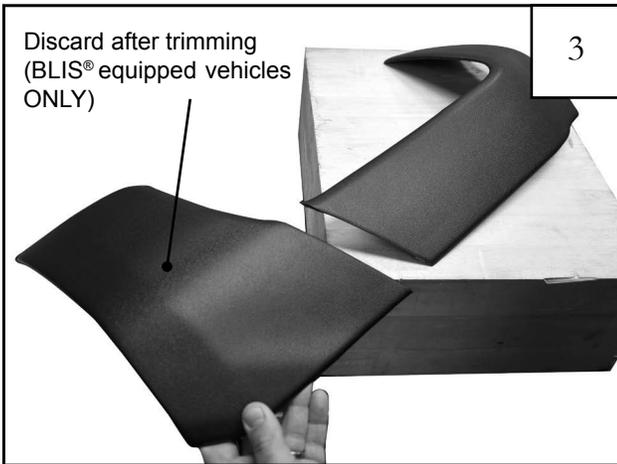


You may discard the lower portion after trimming. Proceed to **Step 4** to continue installation.



Test fit the Corner Guard in place. Take note of where the red tape liner aligns with the vehicle body.

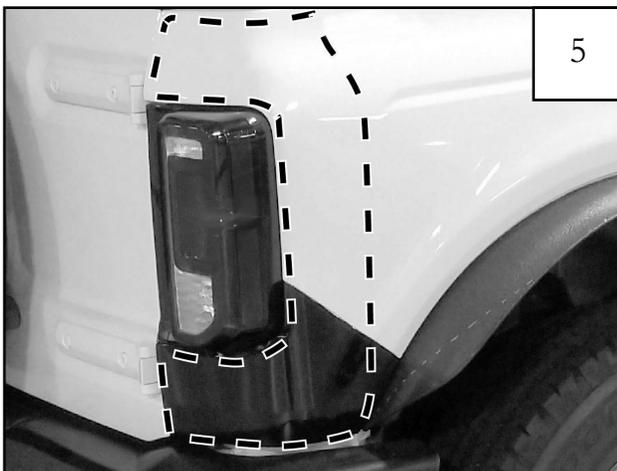


Clean the surface where the tape will contact the vehicle body using the enclosed alcohol pads.

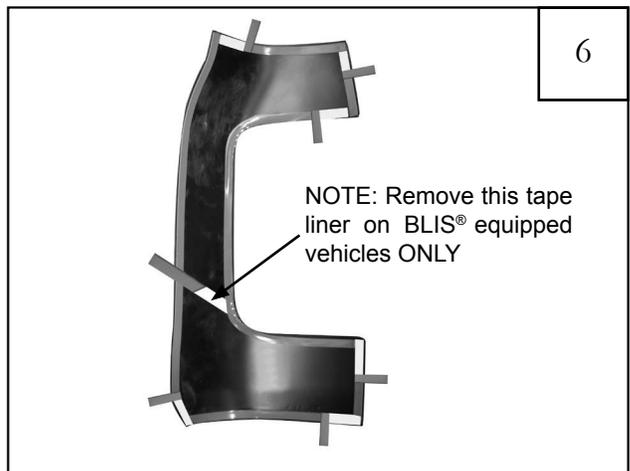

Peel back 2" of red tape liner on all flanges to expose adhesive and create a pull tab.



Position the Corner Guard in place and align with the previously cleaned surface. Ensure that the red tape pull tabs are all accessible. Apply pressure to exposed tape.

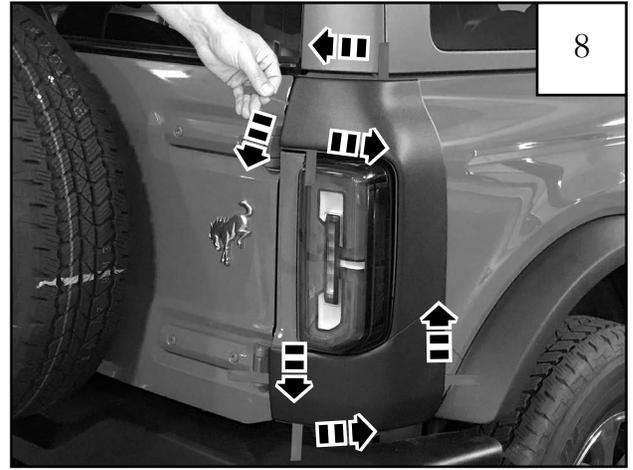

With the Corner Guard in its final position, begin pulling tape tabs to remove remaining tape liners. Proceed in a clockwise pattern, beginning with the upper left hand side as shown above.



Apply FIRM pressure to all flanges to ensure proper adhesion.



Repeat **Steps 1 thru 10** to install driver side Corner Guard.