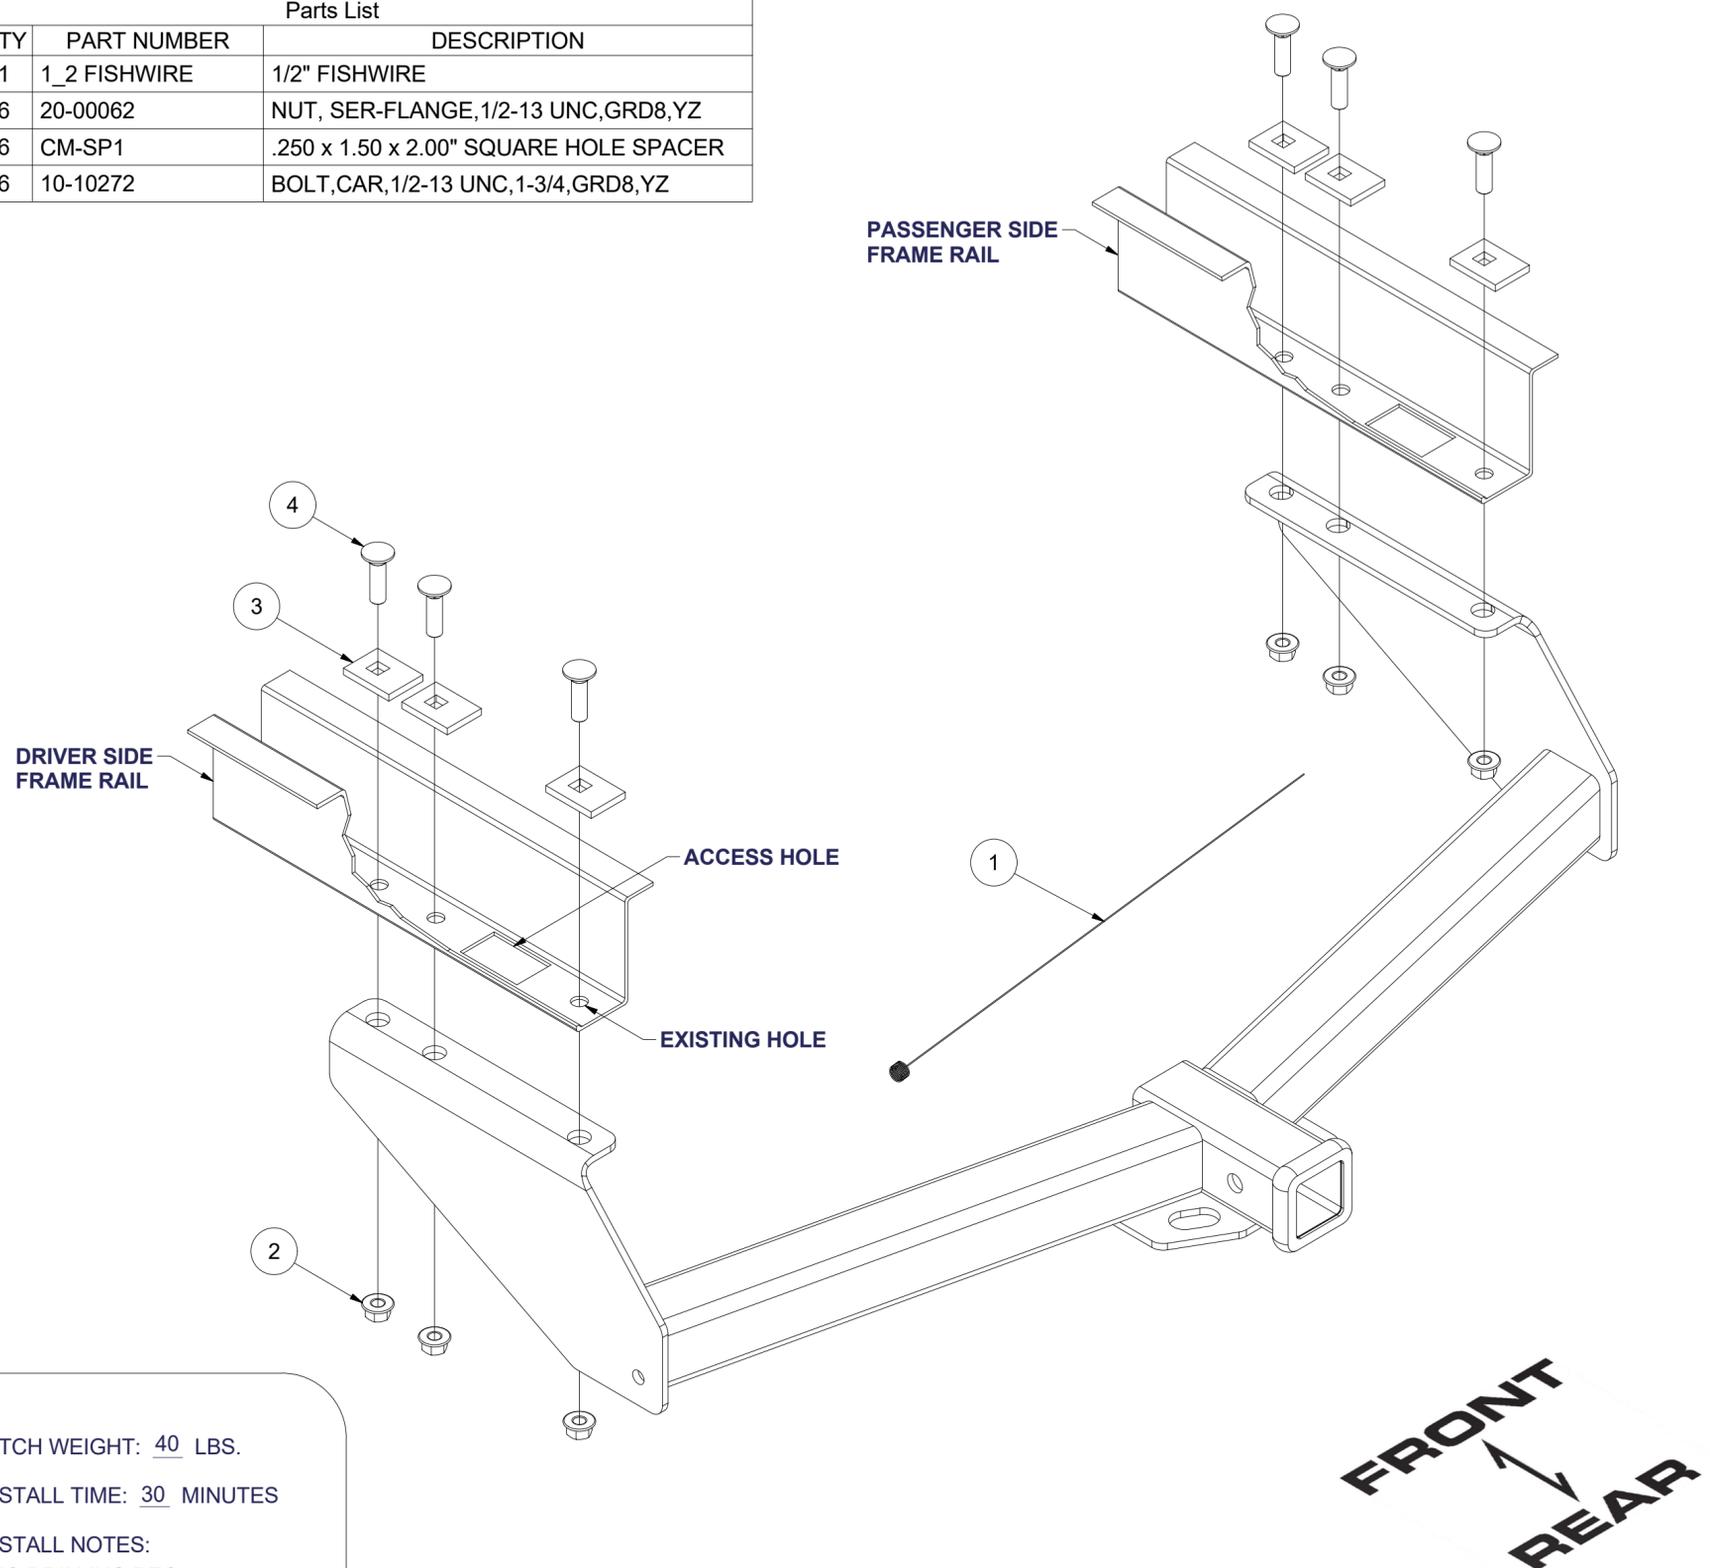


13015**98-04 DODGE VAN (FULL SIZE)**

8/12/2020

**GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 6,000 LBS. TRAILER WEIGHT & 600 LBS. TONGUE WEIGHT.
 GROSS LOAD CAPACITY WHEN USED AS A WEIGHT DISTRIBUTION HITCH: 10,000 LBS. TRAILER WEIGHT & 1,000 LBS. TONGUE WEIGHT
 DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.**

| Parts List | | | |
|------------|-----|--------------|--|
| ITEM | QTY | PART NUMBER | DESCRIPTION |
| 1 | 1 | 1_2 FISHWIRE | 1/2" FISHWIRE |
| 2 | 6 | 20-00062 | NUT, SER-FLANGE,1/2-13 UNC,GRD8,YZ |
| 3 | 6 | CM-SP1 | .250 x 1.50 x 2.00" SQUARE HOLE SPACER |
| 4 | 6 | 10-10272 | BOLT,CAR,1/2-13 UNC,1-3/4,GRD8,YZ |

HITCH WEIGHT: 40 LBS.INSTALL TIME: 30 MINUTES

INSTALL NOTES:

- NO DRILLING REQ.

INSTALLATION STEPS

- 1) Locate mounting holes and the 1 1/4" x 2" access hole in bottom of each frame rail. Fishwire the carriage bolts and spacers up through the access hole and down into the holes in the frame.
- 2) If the vehicle has a heat shield remove one screw from the bottom of the frame rail so the bracket will sit flat on the bottom of the frame.
- 3) Raise hitch into position. Torque all fasteners to 110 lb.-ft.

**PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS
 ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.**

Curt Manufacturing Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.