

INSTALLATION MANUAL

19264

Level of Difficulty

Easy

Installation difficulty levels are based on time and effort involved and may vary depending on the installer level of expertise, condition of the vehicle and proper tools and equipment.

Parts List

Item	Qty	Description
1	1	Wheel basket
2	2	Carriage bolt, M8x1.25x45mm
3	2	Nylock nut, M8-1.25
4	2	Flat washer
5	1	Wrench
6	1	Plastic spacer

⚠ WARNING


Never exceed the vehicle manufacturer's recommended towing capacity.

Never exceed the product's weight capacity.

Do not modify or use this accessory for purposes other than for which it was designed.

It is the user's responsibility to adhere to all state and federal laws regarding obstruction of vehicle lighting (i.e. brake lights, taillights, turn signals and backup lights) and license plate when using this accessory.

Product Photo

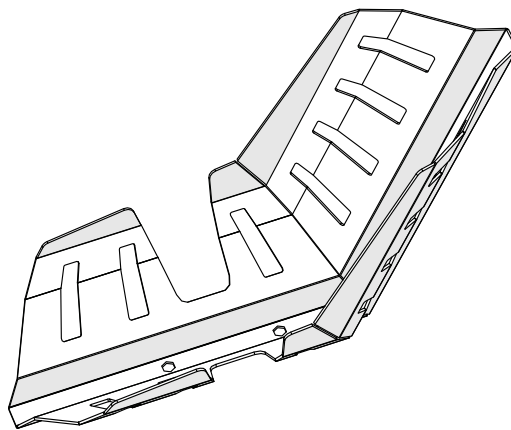

NOTICE

Visit www.curtmfg.com for a full-color copy of this instruction manual, as well as helpful videos, guides and much more!

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

Periodic inspection of your product should be performed to ensure all hardware and / or components remain secure.

To help prevent damage to the product or vehicle, refer to the specified torque specifications when securing hardware during the installation process.


Product Registration and Warranty

CURT stands behind our products with industry-leading warranties. To get copies of the product warranties, register your purchase or provide feedback, visit: warranty.curtgroup.com/surveys

ASSEMBLY

Parts List

Item	Qty	Description
1	1	Wheel basket
2	2	Carriage bolt, M8x1.25x45mm
3	2	Nylock nut, M8-1.25
4	2	Flat washer
5	1	Wrench
6	1	Plastic spacer

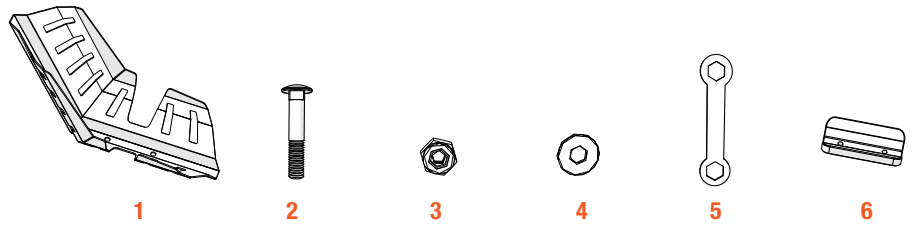


Step 1

Aligning the holes, insert two carriage bolts (#2) through the wheel basket (#1), plastic spacer (#6) and tray as shown.

Note: Ensure the tallest portion of the wheel basket is positioned toward the center of the tray assembly.

Place a flat washer (#4) and nylock nut (#3) on each carriage bolt. Tighten with provided wrench (#5) firmly without crushing the tray.

Position tire strap (not included) in the notched areas of the wheel basket.

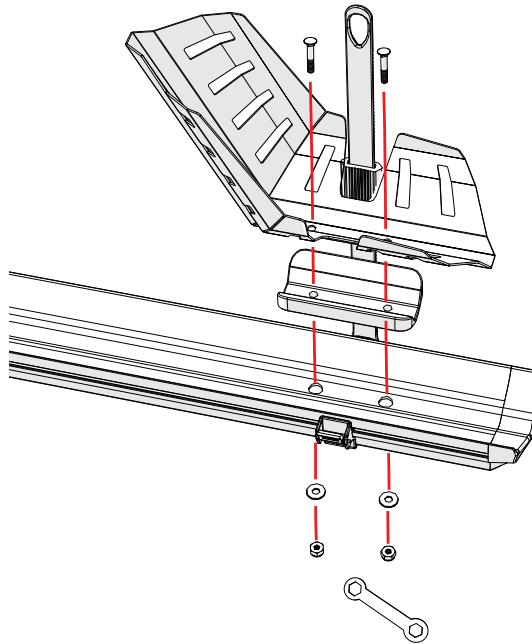

TOWING BASICS & SAFETY INFORMATION

For information on safely towing your trailer, visit curtmfg.com/understanding-towing.