

# 55365

TOYOTA LANDCRUISER  
LEXUS LX470

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filéée.

01/20/09

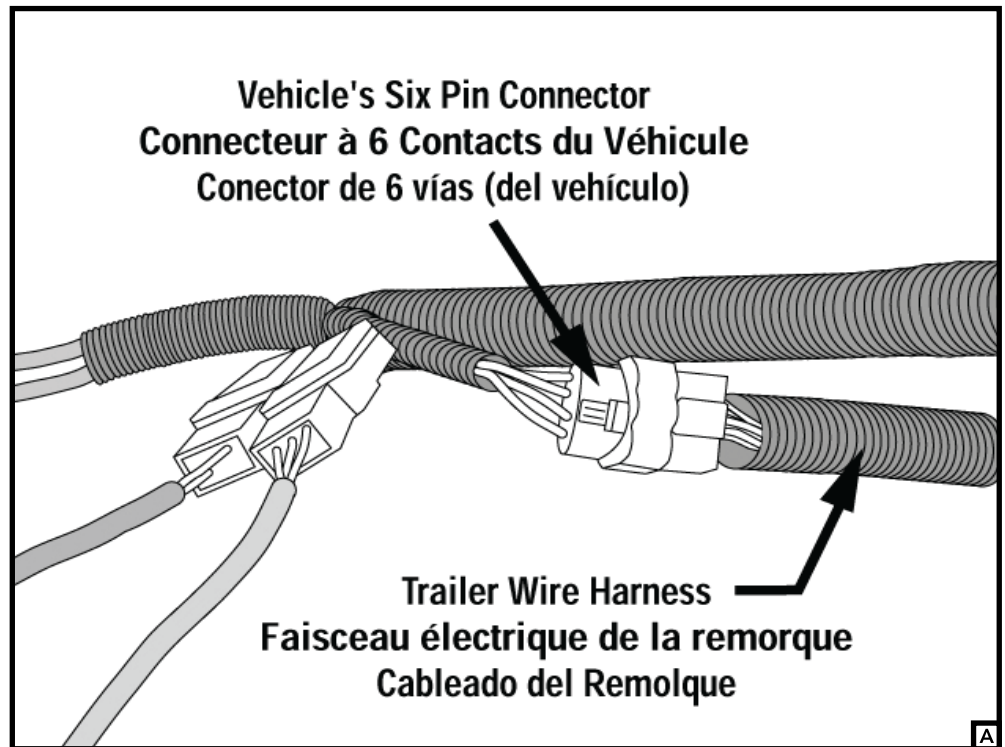

## English

1. Lower the vehicle's spare tire to gain access to the vehicle's tow harness plug.
2. Locate the vehicle's rear passenger side trailer connection with cap and remove tape and cap. (S7)
3. Plug the T-connector harness into the vehicle's connector. **A**
4. Locate a suitable grounding point near the connectors such as the vehicle's frame or crossmember (Do not drill into vehicle floor or bed). Clean dirt and rustproofing from area. Drill a 3/32" hole and secure white wire with eyelet using screw provided.
5. Route the T-connector harness to the center of the vehicle and secure wire and black converter to vehicle crossmember or other mounting points using cable ties and double-sided tape provided.
6. Raise the vehicle's spare tire back into it's original position.

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage to vehicle and/or personal injury.

## Español

## Français



55365