13133

VOLKSWAGEN TIGUAN

10/2/2015

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 3,500 LBS. TRAILER WEIGHT & 350 LBS. TONGUE WEIGHT.

DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS.

** FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY**


HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813


ĺ	Parts List			
1	ITEM	QTY	PART NUMBER	DESCRIPTION
Ì	1	4	M10 - 1.5 x 70 HEX	HEX BOLT
	2	4	3/8"	CONICAL TOOTHED WASHER

TOOLS REQUIRED	
RATCHET	
17mm SOCKET	
TORQUE WRENCH	
UTILITY KNIFE	

EXISTING WELDNUTS:

VEHICLE CROSS MEMBER

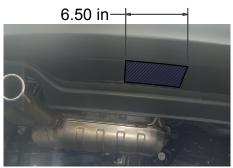

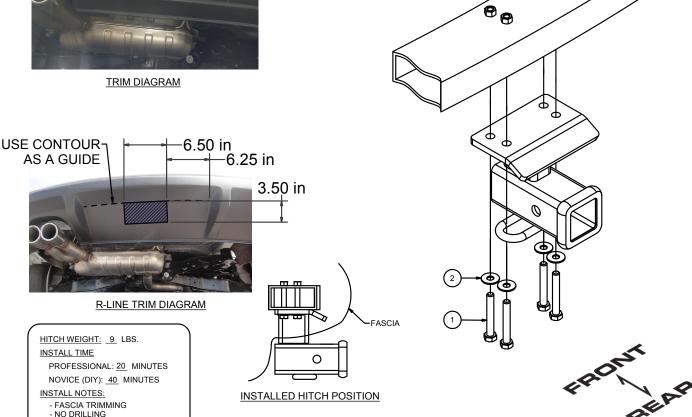

INSTALLATION STEPS

- 1. Locate existing grooved area on bottom of fascia. Trim fascia as shown in TRIM DIAGRAM.

 On R-Line models locate contour in bottom of fascia. Trim as shown in R-LINE TRIM DIAGRAM.
- 2. Raise hitch into position.
- 3. Attach hitch to vehicle's cross member using the hardware supplied and the vehicle's existing weldnuts.
- 4. Torque all M10 hardware to 45 ft-lbs.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Curt Manufacturing LLC., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing LLC., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing LLC.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.