



**Before returning this product  
to the store of purchase**

**Contact Dee Zee if you experience the following problems:**

- Missing Parts
- Installation Problems/Questions
- Warranty Questions

**1.800.779.2102**

Hours of operation: 8am - 5pm CST, Mon-Friday

Review complete warranty policy and register your product at:

**[www.deezee.com](http://www.deezee.com)**



## Dee Zee Running Board Installation Instructions

*Congratulations on your purchase of a quality Dee Zee product. Dee Zee is recognized as having the highest quality running boards and accessories on the market today. We have earned this reputation by offering our customers a product they can be proud to place on their vehicles. Dee Zee meets all the criteria of manufacturing a custom-fit product which guarantees it to be the easiest product to install.*

**Note:** Please take time to read all of the instructions before beginning this installation.

**Warning!** It is the sole responsibility of the vehicle owner to check for tire clearance.

**Warning!** It is unlawful and dangerous to ride on running boards or side box boards while vehicle is in motion.

**Cleaning instructions:** To maintain the finish of your Dee Zee running boards, clean with a mild detergent and use a high grade automotive type wax. **DO NOT USE ABRASIVE CLEANERS ON THIS PRODUCT!**







If you should happen to have any questions with this product or you have an installation question, please feel free to call us at:

1-800-779-8222

If you would like to find out more information on Dee Zee's products, please feel free to visit our website at:


[WWW.DEEZEE.COM](http://WWW.DEEZEE.COM)

# DZ 2532, DZ 2541, DZ 2534 (2009 – Current) Ford F150

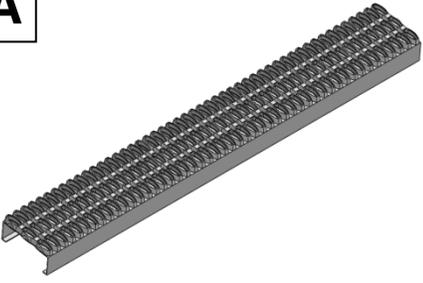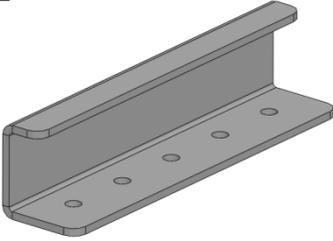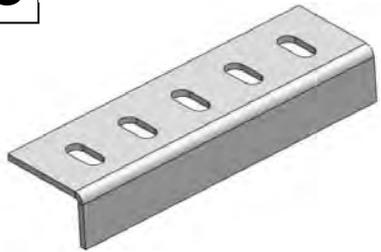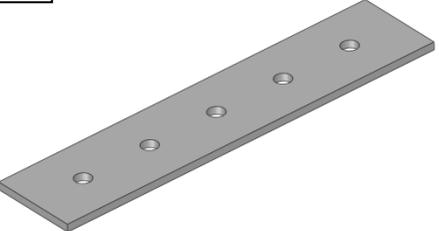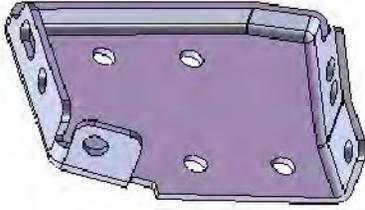
<p><b>A</b> Running Boards</p>  <p>Various X2</p>	<p><b>B</b> End Caps</p>  <p>EC RSP X4</p>	<p><b>C</b> Angle Bracket</p>  <p>B 1792P X4-Regular cab X6-Crew &amp; Super cabs</p>	
<p><b>D</b> Strap bracket</p>  <p>B 1791P X8-Regular cab X10-Crew &amp; Super cabs</p>	<p><b>E</b> Mounting bracket</p>  <p>B 1181P X4-Regular cab X6-Crew &amp; Super cabs</p>	<p><b>F</b> Mounting bracket</p>  <p>B 1183P X4-Regular cab X6-Crew &amp; Super cabs</p>	
<p><b>G</b> 3/8 Flat washer</p>  <p>PN 113B X16-Regular X24-Crew/Super</p>	<p><b>H</b> 3/8 Hex head bolt</p>  <p>PN 114B X8-Regular X12-Crew/Super</p>	<p><b>I</b> 1/4 hex nut</p>  <p>PN 71B X20-Regular X26-Crew/Super</p>	<p><b>J</b> 3/8 nut</p>  <p>PN 90B X8-Regular X12-Crew/Super</p>
<p><b>K</b> 1/4 hex head bolt</p>  <p>PN 96B X20-Regular X26-Crew/Super</p>	<p><b>L</b> 1/4 flat washer</p>  <p>PN 72B X40-Regular X52-Crew/Super</p>	<p><b>M</b> M8 flange head bolt</p>  <p>PN 525 X8-Regular X12-Crew/Super</p>	<p><b>N</b> U-clip</p>  <p>PN 909 X8-Regular X12-Crew/Super</p>

**Tools Required**


Ratchet / Wrench  
7/16"  
9/16"

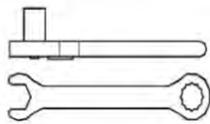


1

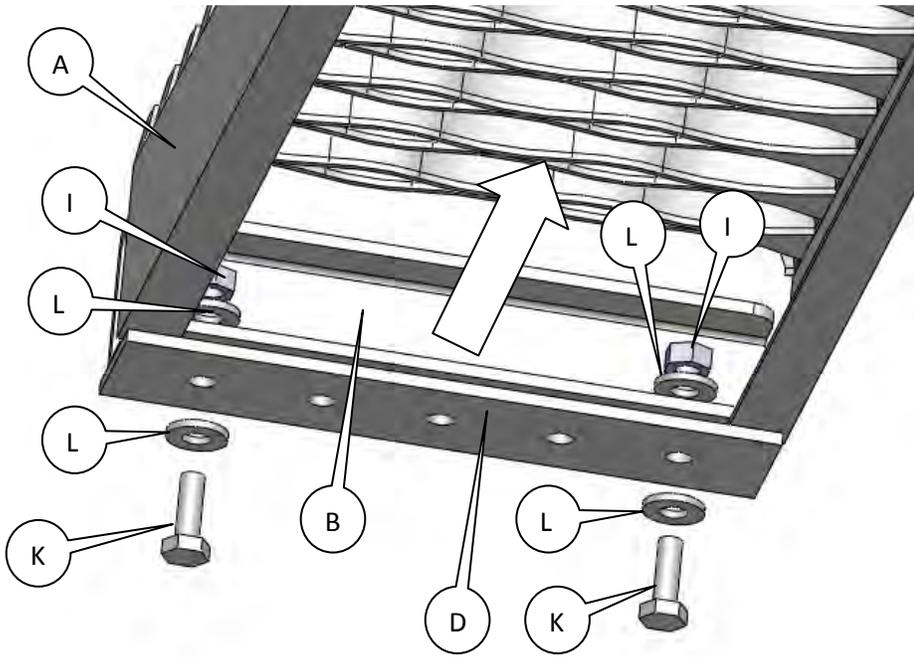

X4


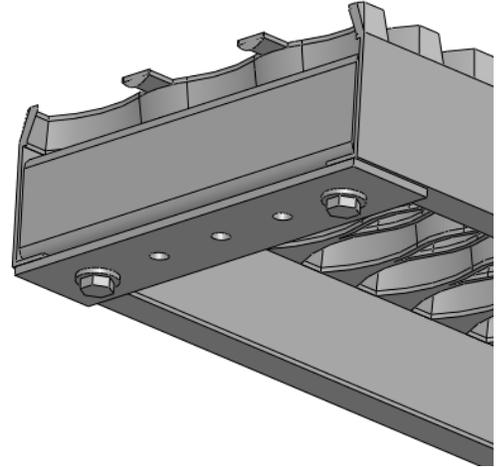


2

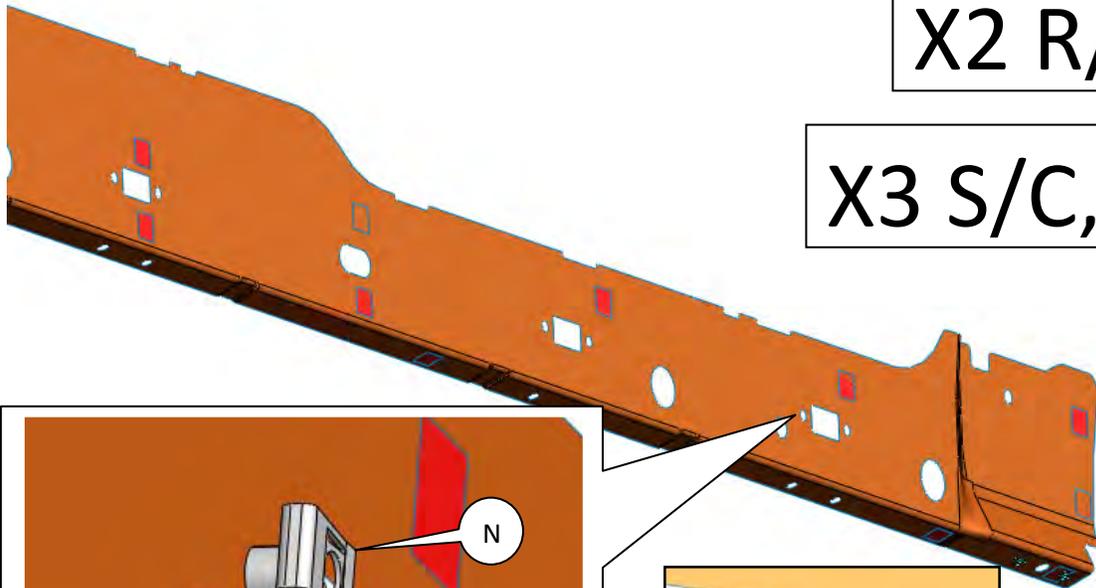


X2 R/C


X3 S/C, C/C

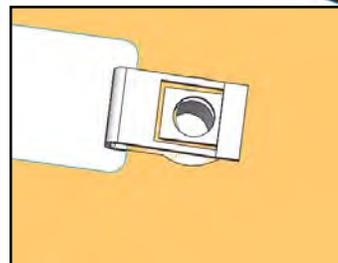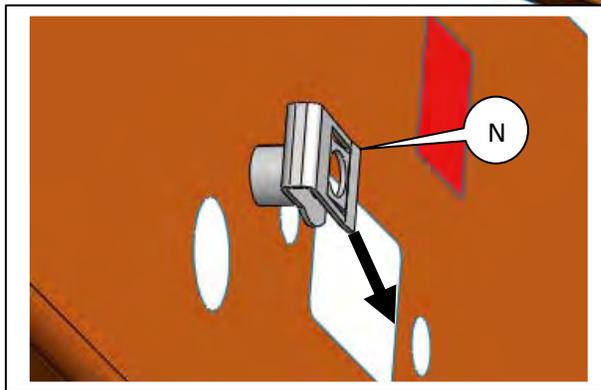


3

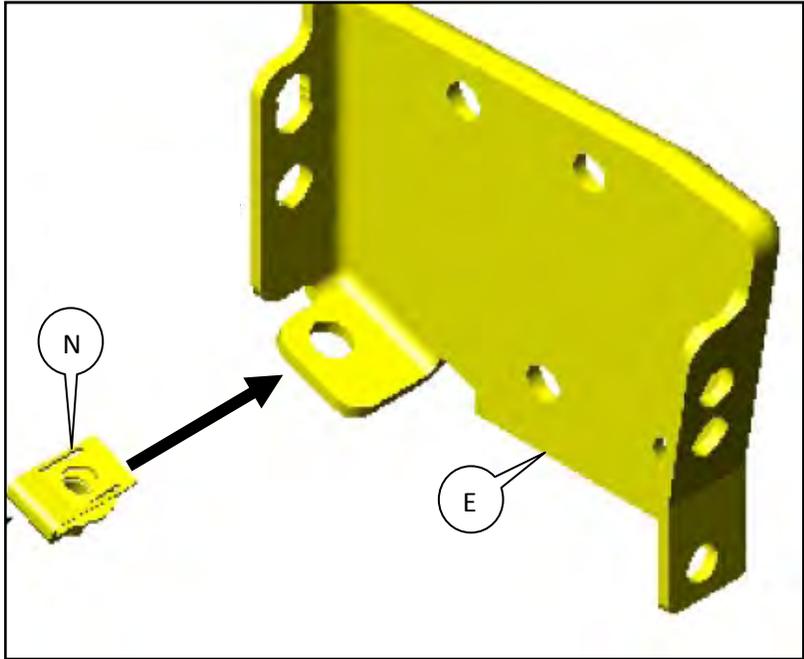


4

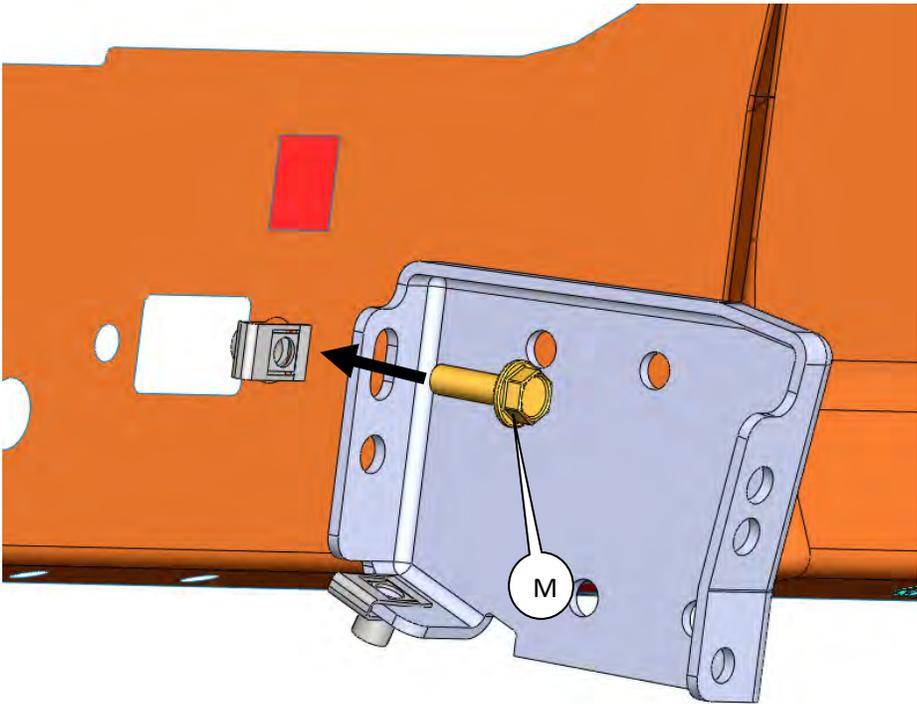

5

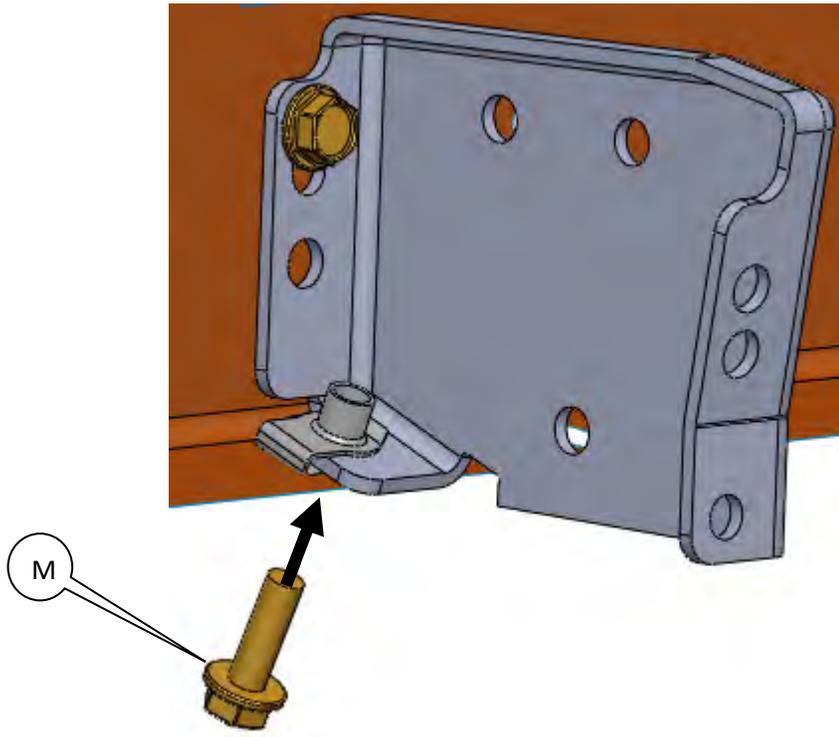

7

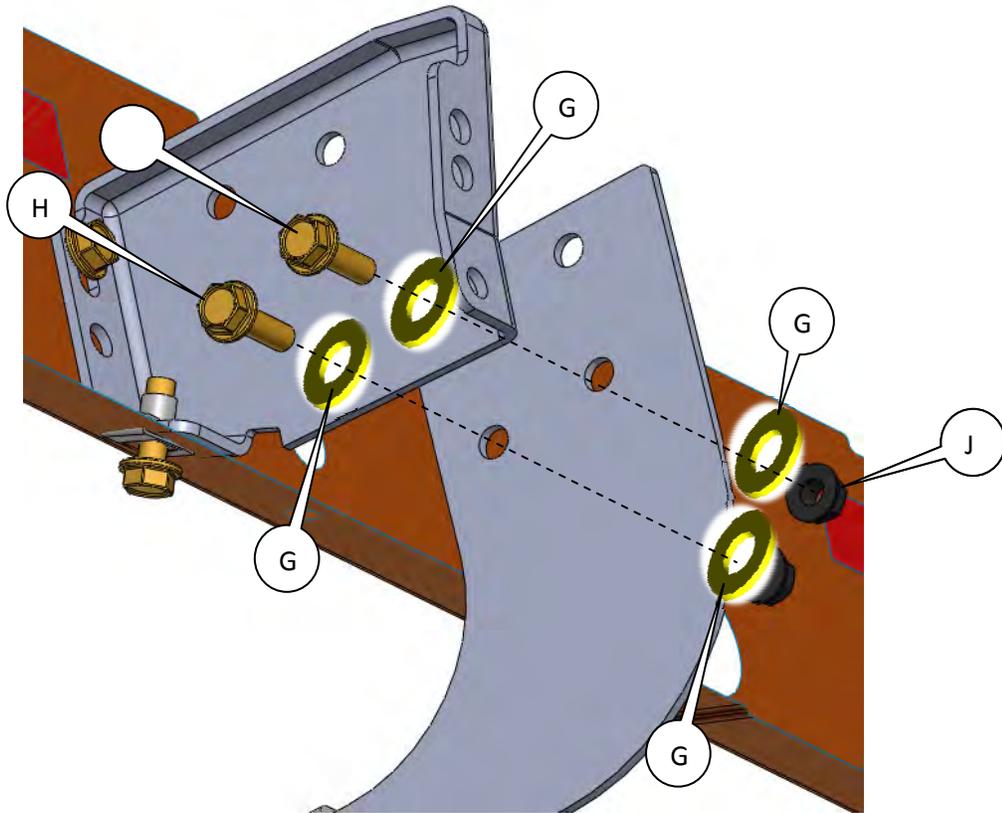

7

