

INSTALLATION SHEET

MAXSEAL

TAILGATE SEAL

extang
AMERICA'S BEST
SELLING TONNEAUS

1




Open tailgate and wash back of truck bed where tailgate seal is to be applied thoroughly with soap and water. Wipe with alcohol pad and make sure surface is completely dry.

4

Measure and cut seal for each side wall from truck bed seal to top of sidewall frame.

2

Seal may be installed either along the rear face or the inside surface depending on the tailgate sidewall structure. Cut a small sample and test fit, making sure that bulb-end compresses when the tailgate is closed.

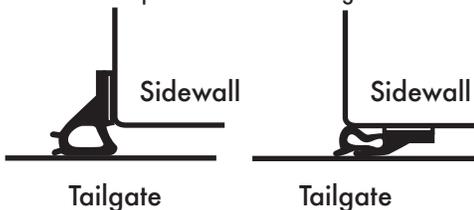

3

Measure rear face of truck bed bottom and cut Maxseal to fit from sidewall to sidewall. Remove release strip from adhesive tape and apply seal, starting at one end. **DO NOT STRETCH SEAL WHEN APPLYING.**

5

Close the tailgate and check for even fit of seal on bottom and both sides. If necessary, reposition seal for better fit. Permanently affix the tailgate seal by firmly compressing seal along its whole length. Let seal stand for 10 minutes before closing tailgate to allow adhesive to set.

For best results apply at temperatures between 60° -90° (F).

Extang Corporation
5400 S. State Rd.
Ann Arbor MI 48108
734-677-0444, Fax: 734-677-8409

Visit us at:
extang.com
Item No. 0134-1403 RH Printed in U.S.A.