

# INSTALLATION SHEET


## TOOL BOX TONNO

### SOLID FOLD




### TRIFECTA™

**extang**  
AMERICA'S BEST  
SELLING TONNEAUS

Place L-channel against tool box with foam seal between the bottom of the L-channel and truck bed. Center L-channel side-to-side on truck bed sides.

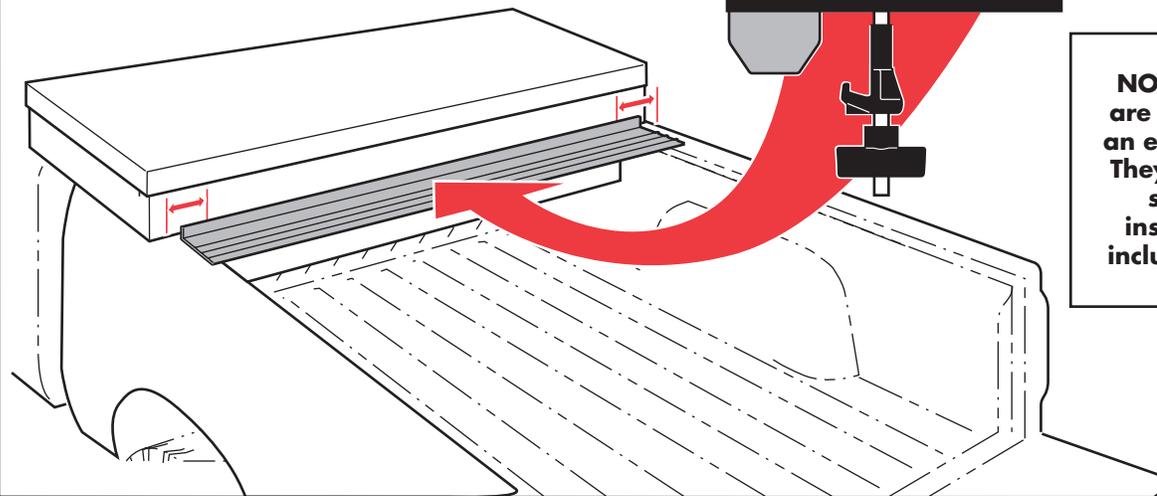

**NOTE:** These instructions are for adding a tonno to an existing truck tool box. They are supplemental to steps in the regular installation instructions included with your tonno.

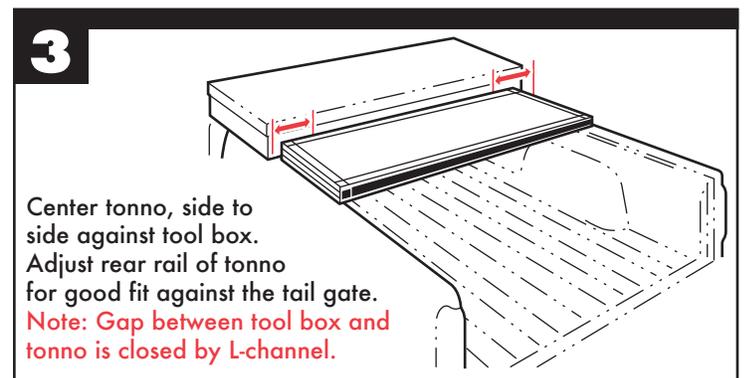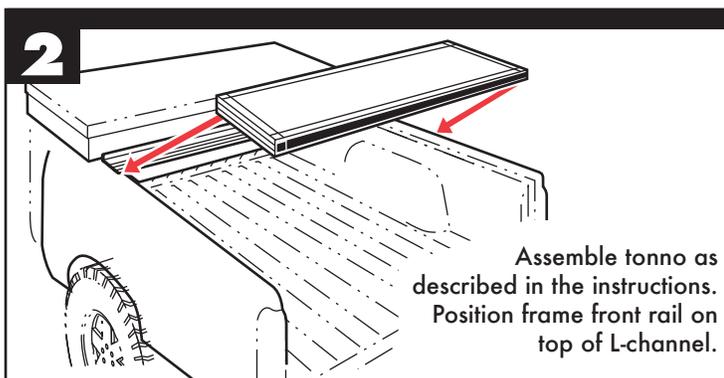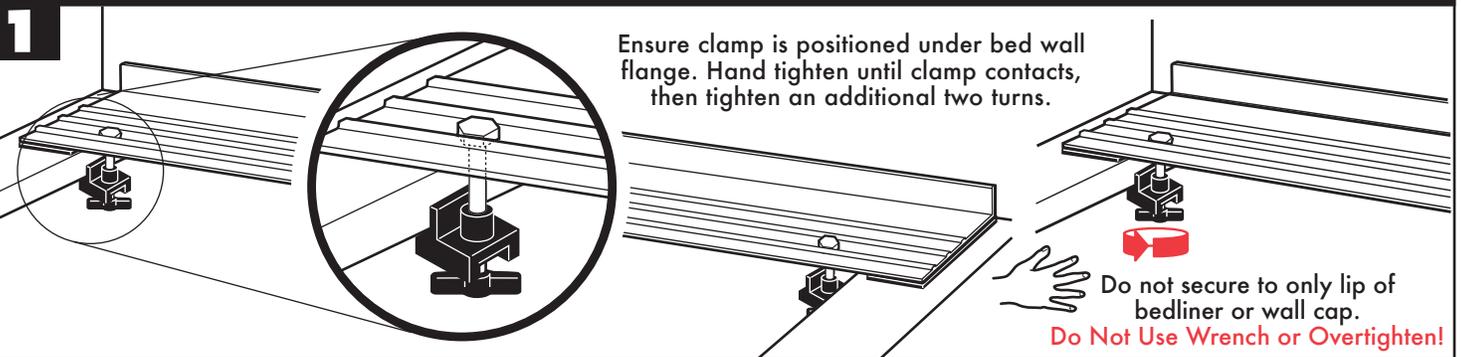

Extang Corporation  
5400 S. State Rd.  
Ann Arbor MI 48108  
734-677-0444, Fax: 734-677-8409

Register your warranty at:

**extang.com**

Item No. 0330-1403 RH Printed in U.S.A.