

Wheel Well Guards

79011 - Installation Instructions
Chevrolet Silverado 1500/2500/3500

PACKAGE CONTENTS:



Wheel Well Guard
Driver's Side (1)

Supplied Hardware for Work Truck Models

- 8 - #10 SEM Screws
- 8 - U-Clips




Wheel Well Guard
Passenger's Side (1)

TOOLS REQUIRED:

- Torx T15 Socket Bit
- Socket Driver
- Phillips Head Screwdriver

VEHICLE PREPARATION:

Your vehicle's rear fender wells should be cleaned prior to the installation of your new Husky Wheel Well Guards.

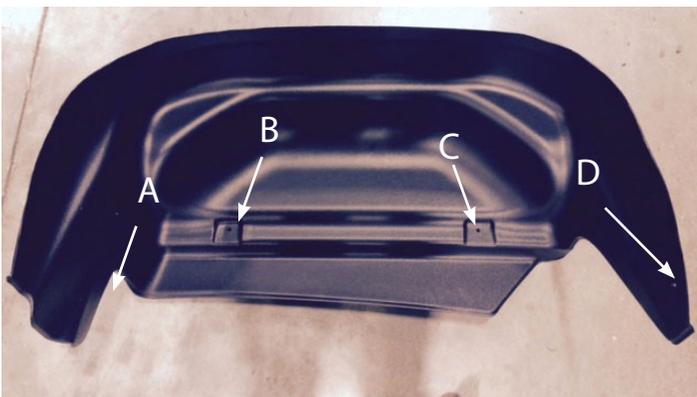

Installation

Read all directions thoroughly prior to the installation of your Wheel Well Guards.

A, B, C & D are pre-drilled fastener locations for installation.



Note: If you have a Work Truck model that did not come with factory wheel well liners and fasteners than please skip to step 3.

1. Remove all factory fasteners that hold the factory wheel well liner in-place with the Torx 15 bit and driver and remove the factory liner.
(13 locations per side)



2. Reinstall 2 factory screws that hold the factory rock guard on the front side of the fender and tighten.
(2 places per side)



3. Verify that you are installing the correct Wheel Well Guard by checking the part no. located on the backside of the part.
 - 7901 DS installs on the driver's side.
 - 7901 PS installs on the passenger's side.



4. Insert the Wheel Well Guard into the rear wheel well opening over the tire.

NOTE: It is not necessary to remove the tire.



5. Push The Wheel Well Guard up into the wheel well opening.



6. Insert the lower flap sections of the Wheel Well Guard into the fender well behind the fender well lip. Perform this step for both the front and rear lower flap sections.



7. Tuck the remaining portion of the Wheel Well Guard behind the fender lip all the way around the fenderwell opening.



8. Align the 4 holes in the Wheel Well Guard with the factory screw locations and install the factory torx head screws. Install all screws before tightening.

Note: If you have a Work Truck model that didn't come with factory wheel well liners than use the supplied screws and U-clips for the installation through the factory holes. The U-clip will go on the back side of the metal and used as a nut at the 4 mounting locations (per side).



9. Once all fasteners at locations A,B,C & D are installed, tighten with the Torx 15 bit / driver.
10. Repeat steps 1-9 on the other side of the vehicle.

Congratulations,
You have now successfully installed
your new Husky Liners Wheel Well
Guards. If you have any questions
please call us at 1-800-344-8759.

HUSKY LINERS WHEEL WELL GUARDS LIMITED LIFETIME WARRANTY

WINFIELD CONSUMER PRODUCTS WARRANTS YOUR HUSKY LINERS WHEEL WELL GUARD PROTECTION PRODUCT WITH A LIMITED LIFETIME WARRANTY TO THE ORIGINAL PURCHASER. IF YOUR FINISHED PRODUCT IS FOUND DEFECTIVE, WINFIELD CONSUMER PRODUCTS WILL AUTHORIZE THE REPLACEMENT OF YOUR PRODUCT AT NO CHARGE TO THE ORIGINAL PURCHASER. THIS WARRANTY COVERS PRODUCT REPLACEMENT ONLY. WINFIELD CONSUMER PRODUCTS WILL NOT PROVIDE A MONETARY REFUND FOR THE PRICE OF THE PRODUCT OR CHARGES INCURRED DURING INSTALLATION. THIS WARRANTY IS NOT TRANSFERABLE. WINFIELD CONSUMER PRODUCTS ASSUMES NO LIABILITY FOR PRODUCT FAILURE DUE TO ACCIDENT, COLLISION, NEGLIGENCE, VANDALISM OR ABUSE.

THERE IS NO WARRANTY OF MERCHANTABILITY AND NO WARRANTY THAT THE PRODUCT SHALL BE FIT FOR ANY PARTICULAR PURPOSE OR USE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY HAVE OTHER RIGHTS WHICH VARY FROM JURISDICTION.

THIS PRODUCT IS TO BE USED IN COMPLIANCE WITH ALL APPLICABLE STATE OR PROVINCIAL LAWS. INSTALLATION OF THIS PRODUCT IN A MANNER THAT VIOLATES STATE OR PROVINCIAL LAW IS A MISUSE OF THE PRODUCT AND VOIDS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTY OF MERCHANTABILITY. WINFIELD CONSUMER PRODUCTS SHALL NOT BE LIABLE IN ANY MANNER WHATSOEVER FOR DAMAGES RELATED TO THE USE OF THIS PRODUCT IN AN ILLEGAL MANNER.

FOR WARRANTY SERVICE CONTACT YOUR HUSKY LINERS DEALER OR CALL WINFIELD CONSUMER PRODUCTS AT (800) 344-8759.