

# Installation Instructions

I - Sheet Number WIN144 Rev.C



## Ventvisor® Deflector


**For proper installation and best possible fit, please read all instructions BEFORE you begin.  
For technical assistance or to obtain missing parts, please call Customer Relations at 1-800-344-8759.**

### Important Safety Information




- CAUTION - Before driving, ensure that the vent visor is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.


### Contents - 2 Piece Set **NOTE:** Actual product may vary from illustration.



Front Driver  
Side Visor



Front Passenger  
Side Visor




Scotch Brite  
Pad




Alcohol Pad x2

### Contents - 4 Piece Set



Front Driver  
Side Visor




Front Passenger  
Side Visor




Rear Driver  
Side Visor



Rear Passenger  
Side Visor



Scotch Brite  
Pad

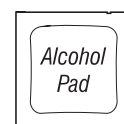

Alcohol Pad x4

### Tools Required



Car Wash Supplies



Clean Towel




Putty Knife

### Preparation Before Painting / Installation


- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.
- **Ensure vehicle surface and part are above 60°F (15°C) prior to installation.**



### Installation Steps **NOTE:** Actual application may vary slightly from illustrations.




Lower the window & scuff the outside of the rubber window trim where the visor will attach. Clean the scuffed area with an alcohol pad.

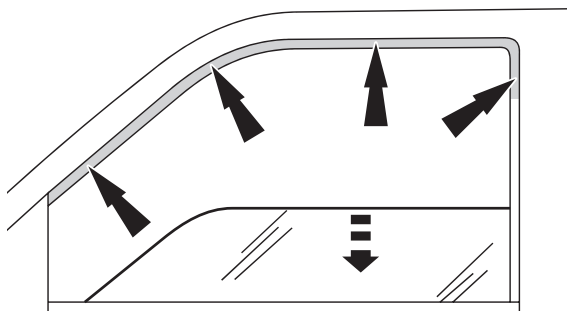

1

Remove the tape liner from the rear flange. Peel back 2" of tape liner from each end of top flange.

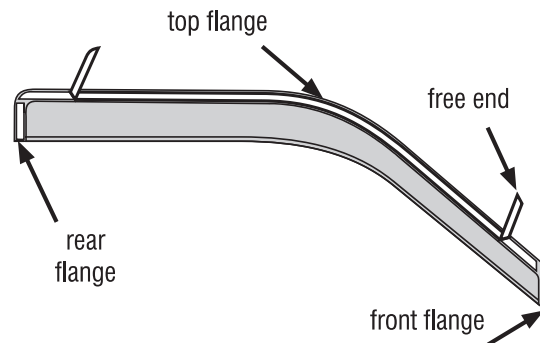


2

## Installation Steps


**NOTE:** Actual application may vary slightly from illustrations.

Slide the front flange behind the mirror cap, use a putty knife to create a gap if needed. Attach the top and rear flanges to the rubber window trim.

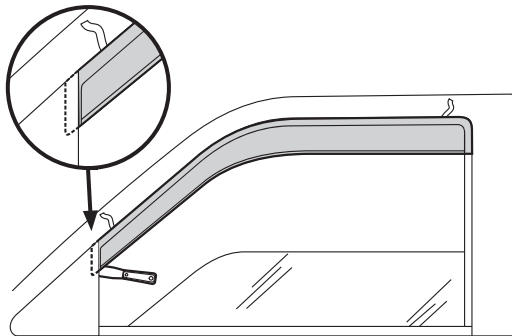

3

Remove tape liner by pulling on free ends. Apply pressure to top and rear tape flanges to secure.

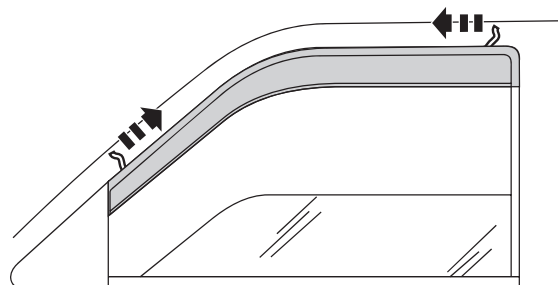


4

## 4 Piece Set

Clean glass with an alcohol pad. Attach visor to the vehicle's window glass as shown.

Rear visor attached  
to glass

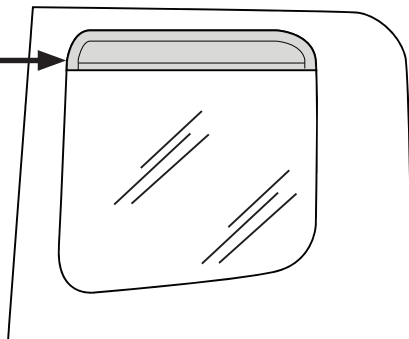

**NOTE:** Do **NOT** use Scotch Brite pad on window glass

5

## Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.



The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



## Congratulations!

You have purchased one of the many quality Husky® branded products. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



1-800-344-8759 • Visit us at [huskyliners.com](http://huskyliners.com)

© 2025 Husky Liners, Inc. All rights reserved.

Husky® and the Husky logo are trademarks of Husky Liners, Inc.