

INSTALLATION MANUAL

401734

Level of Difficulty

Easy

Installation difficulty levels are based on time and effort involved and may vary depending on the installer level of expertise, condition of the vehicle and proper tools and equipment.

Parts List

Qty	Description
6	Mounting bracket
12	Serrated-flange nut, M8


Tools Required

Ratchet	Socket, 12mm
---------	--------------

Torque Specifications

M8 bolt	16 ft.-lbs.
Use above torque setting unless otherwise noted	

Product Photo

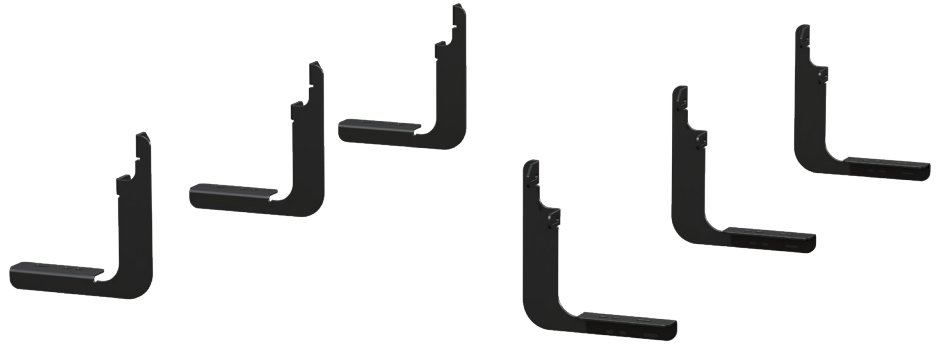

Maintenance

Mild automotive detergent may be used to clean the product. Do not use dish detergent, abrasive cleaners, abrasive pads, wire brushes or other similar products that may damage the finish.

Product Registration and Warranty

LUVERNE stands behind our products with industry-leading warranties. To get copies of the product warranties, register your purchase or provide feedback, visit: warranty.curtgroup.com/surveys

INSTRUCTIONS

Step 1

Install a mounting bracket over the factory provided studs. Secure each with two flange nuts. Repeat for all locations.

Note: Be sure the factory stud threads are clear of any excess paint or undercoating. Use a wire brush or an M8 x 1.25 thread die to clean the threads if needed.

