



## **INSTALLATION INSTRUCTIONS**

### **AGGRESSIVE RUNNING BOARD**


**2019-2024 CHEVY SILVERADO/SIERRA 1500 REGULAR CAB  
(INCL. DIESEL MODELS W/DEF & 2022 SILVERADO 1500 LTD & 2022 SIERRA 1500 LI  
MITED)**

**2020-24 SILVERADO/SIERRA 2500/3500 REGULAR CAB (INCL. DIESEL MODELS  
W/DEF)**

**PART# ENT02320GSKIT**

**PARTS LIST:**

2	Running Boards	8	8-1.25mm x 30mm Hex Bolts
2	Driver/Left Mounting Brackets	16	8mm x 24mm OD x 2mm Flat Washers
2	Passenger/Right Mounting Brackets	16	8mm Lock Washers
4	8mm Double Bolt Plates	8	8mm Hex Nuts

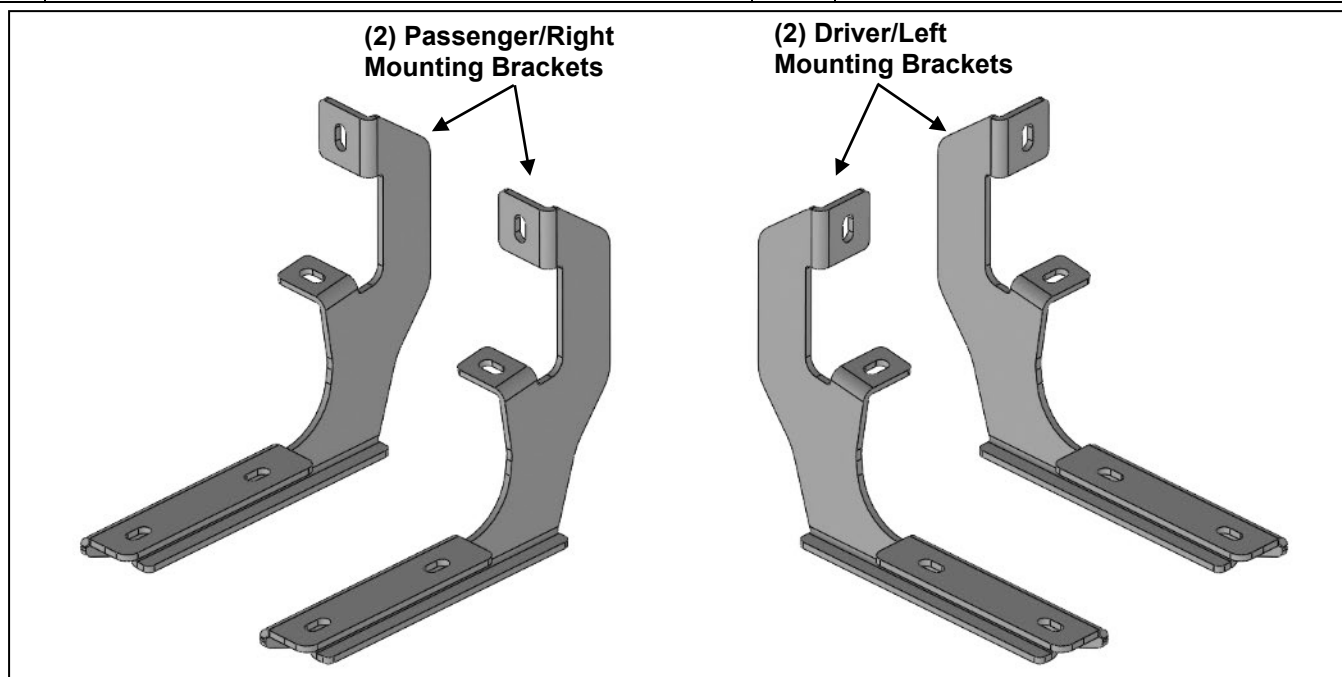






**PROCEDURE:**

**REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED.**

1. Start the installation under the Driver/Left side of the vehicle. Remove the plastic plugs along the bottom edge of the body, **(Figure 1)**. Directly above each threaded insert is a top mounting location on the side of the body panel. Hold a Mounting Bracket up in place to help determine the correct mounting holes to use along the body. **NOTE:** Thread an 8mm Hex Bolt into the threaded inserts to clear paint as required.
2. Select (1) Driver/Left Mounting Bracket, **(Figure 2)**. Attach the Mounting Bracket to the front location with (2) 8mm x 30mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers, **(Figure 2)**. Do not fully tighten hardware.
3. Repeat **Steps 1 & 2** to attach the remaining (1) Driver/Left Mounting Bracket to the rear mounting location along the body panel, **(Figure 3)**.
4. Select (1) Running Board. Place the Running Board on top of the Brackets. Locate the channel opening in the bottom of the Running Board. Select (2) 8mm Double Bolt Plates. Insert the Bolt Plates into the channel in the bottom of the Running Board closest to the Brackets, **(Figure 4)**. Lift the Running Board up and guide the studs through the Brackets.
5. Attach the Running Board to the Brackets with (4) 8mm Flat Washers, (4) 8mm Lock Washers and (4) 8mm Hex Nuts, **(Figure 5)**.
6. Level and adjust the Running Board and fully tighten all hardware.
7. Repeat **Steps 1—6** to attach the Passenger/Right Running Board.
8. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

**To protect your investment,** Do not use any type of polish or wax that may contain abrasives that could damage the finish. Mild soap may be used also to clean the Running Board.

### Driver/Left side Installation Pictured

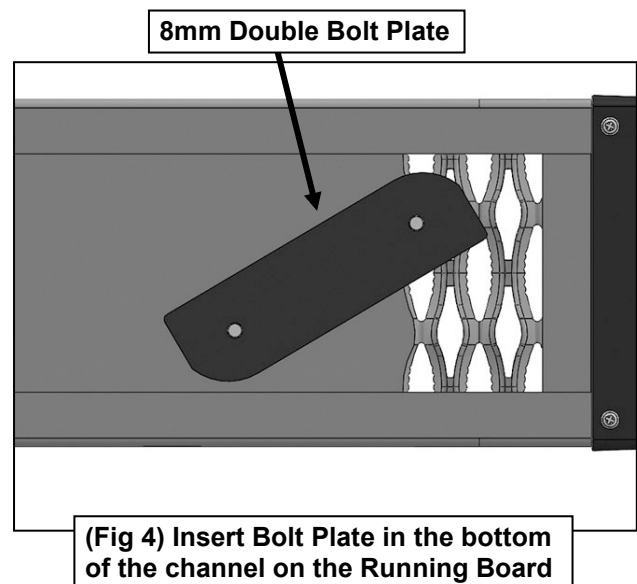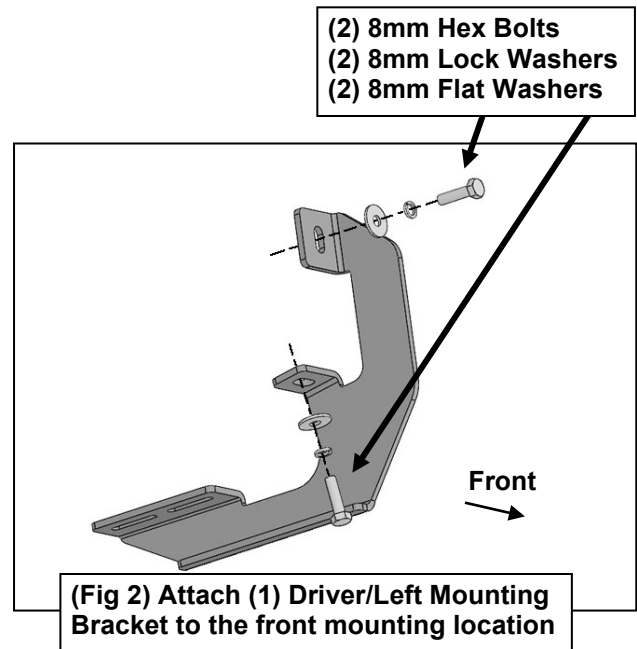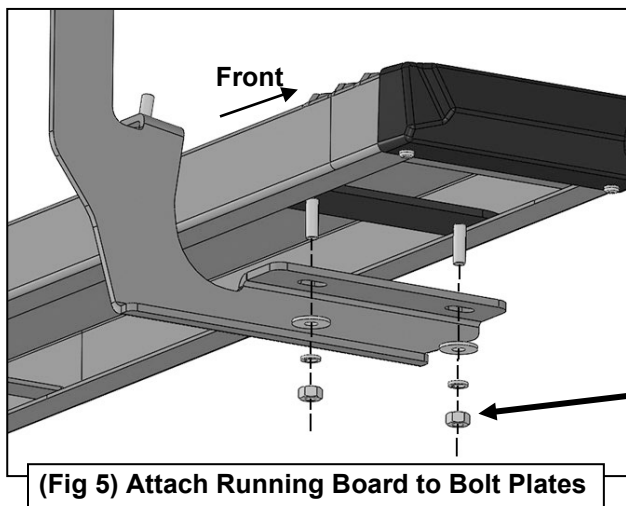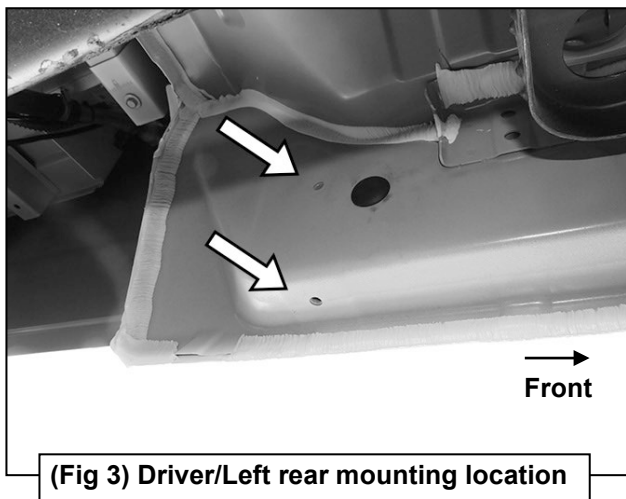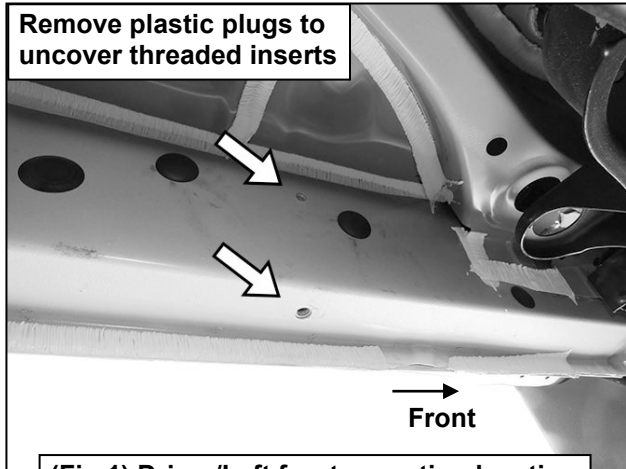

- (2) 8mm Flat Washers
- (2) 8mm Lock Washers
- (2) 8mm Hex Nuts