


HONDA RIDGELINE INSTRUCTIONS

Item Part #	Description
1.	Side Rail, Driver's Side
2.	Side Rail, Passenger's Side
3.	1705964 Bracket, Side Rail
4.	1706911 Flat Hd. Screw, 1/4"-20 x 3/4"
5.	1701543 Flat Washer, 1/4"
6.	1700428 Hex Nut, 1/4"-20 Nylon Lock

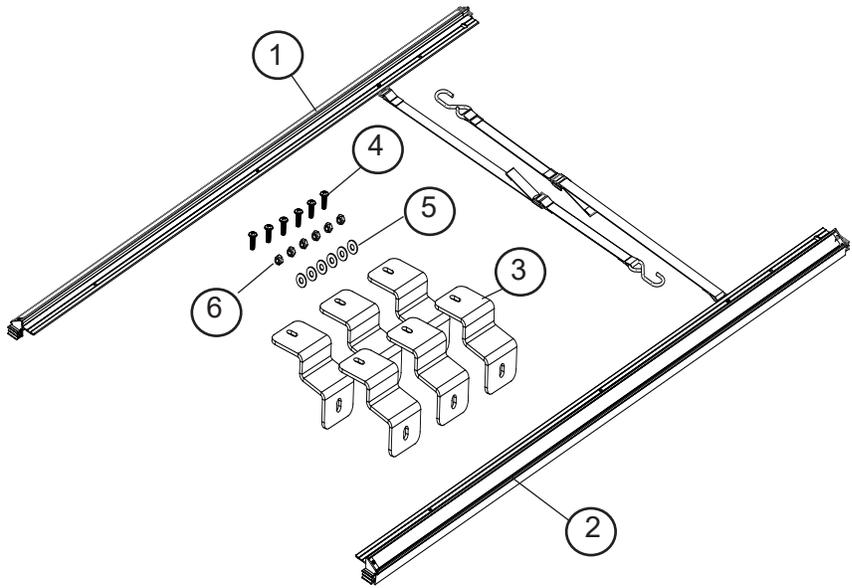


TOOLS NEEDED:
 T-30 Torx wrench
 Flat Head Screw Driver

STEP 1: Using a T-30 torx wrench, remove the three factory installed M6 Shoulder bolts from both the driver and passenger side box as shown.




STEP 2: Mount brackets on driver and passenger sides using the factory installed M6 Shoulder bolts. Do not fully tighten these bolts, just tighten them finger tight.

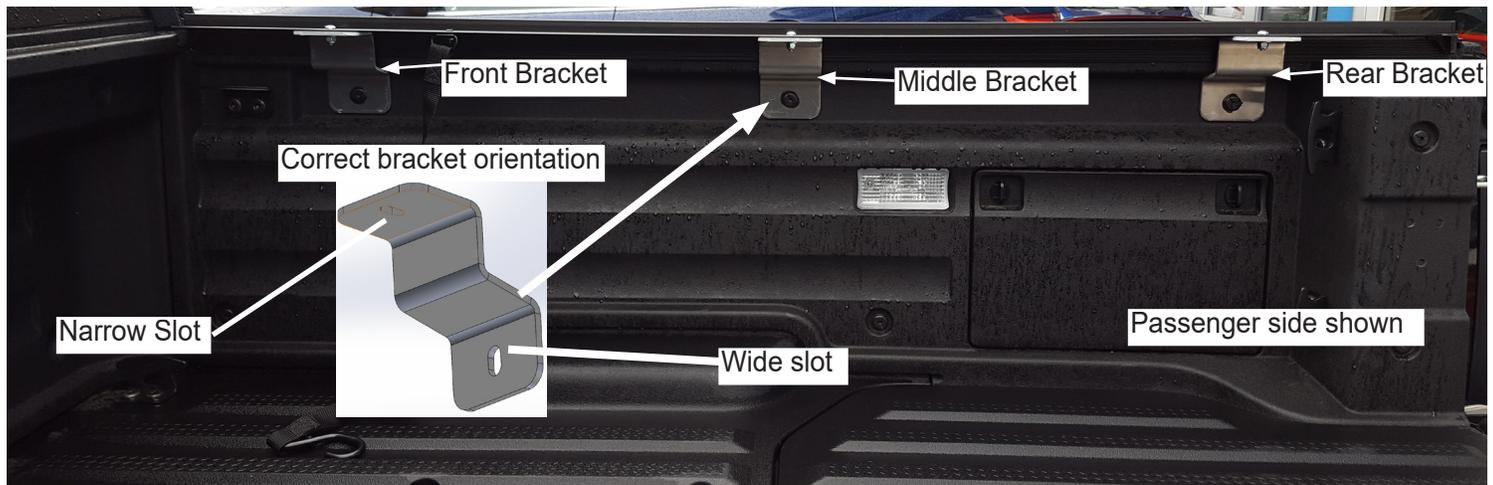


HONDA RIDGELINE INSTRUCTIONS

STEP 3: Fasten driver and passenger rails using (#4) Flat Hd. screw 1/4" -20 x 3/4" and (#5) 1/4" flat washers and (#6) 1/4"-20 Hex Nylon lock nuts. But leave bolts loose.

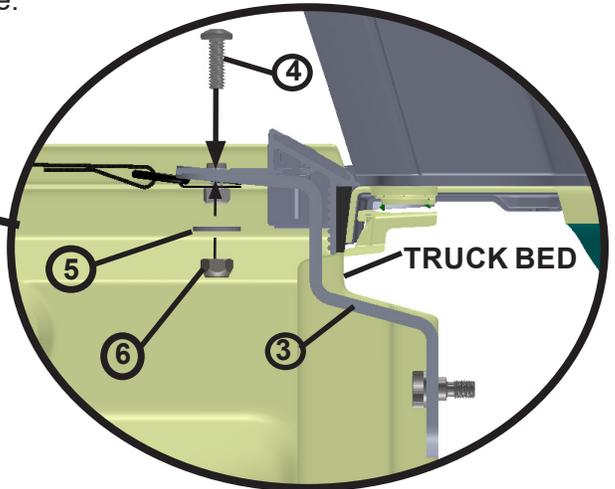

STEP 4: With everything loosely assembled tighten all six M6 Shoulder bolts making the bracket tight to the truck bed, leaving the rails able to move.

STEP 5: Push the rail against the truck bed and tighten the pan head bolts.

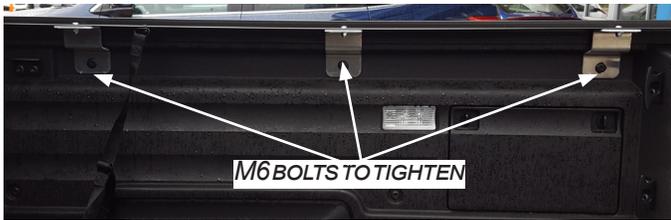

STEP 6: Tighten all fasteners. Repeat steps 1-5 on driver's side.



STEP 7:

Refer to owners manual supplied with this kit for further instruction on installing your cover.